
MODEL: SS 9048

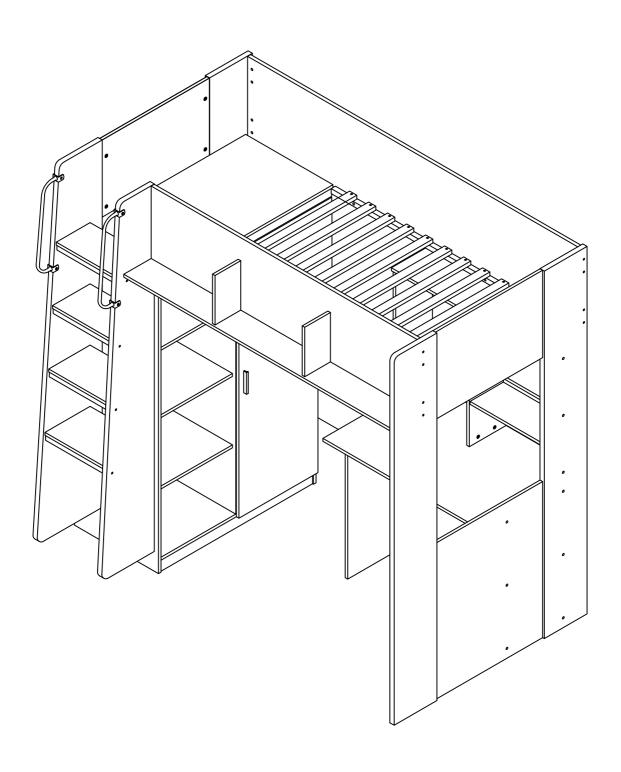

Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.

NOTE: Two person are needed to assemble this product. Assembly should be carried out in the room that the bed will be used.

BEFORE YOU START, HERE IS SOME HELPFUL ADVICE

- 1. Ensure that the top mattress fitted to this bunk is no higher than the warning label attached to the safety rail assembly. IE: maximum mattress height 200mm (8").
- 2. Do not discard any of the packing until you have checked that you have all the parts and pack of fittings.
- 3. Assemble this product on a carpet.
- 4. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the Assembly should all fixing points be fully tightened.
- 5. We recommend a periodic check on all fixing points to make sure they remain fully tightened. This instruction should be kept in a safe place for future reference.
- 6. In the unlikely event that this product has missing or damaged parts, please contact your dealer. Do not use substitute parts.


SAFETY WARNINGS

- DO NOT ALLOW CHILDREN UNDER 6 YEARS OLD TO USE THE UPPER BUNK.
- PERIODICALLY ENSURE THAT THE GUARDRAILS, LADDER AND OTHER COMPONENTS ARE MAINTAINED IN THE PROPER POSITION AND ARE FREE FROM DAMAGE, AND THAT ALL THE FIXING SCREW ARE TIGHT.
- ALWAYS USE THE LADDER FOR ENTERING AND LEAVING THE UPPER BUNK.
- DO NOT ALLOW HORSEPLAY ON OR UNDER THE BED AND PROHIBIT JUMPING ON THE BED.
- THIS UNIT IS HEAVY. PLEASE USE AN ASSISTANT WHEN LIFTING.
- USE GUARDRAILS ON BOTH LONG SIDES OF THE UPPER BUNK.

GENERAL CARE

- Wipe clean with a slightly damp soft cloth.
- Avoid the use of all household cleaners and abrasives.
- When moving your furniture, carefully lift into place.
- Never drag or push the pieces across the floor as this will cause damage to the joints.

BOSTON Highsleeper With Workstation Assembly Instructions

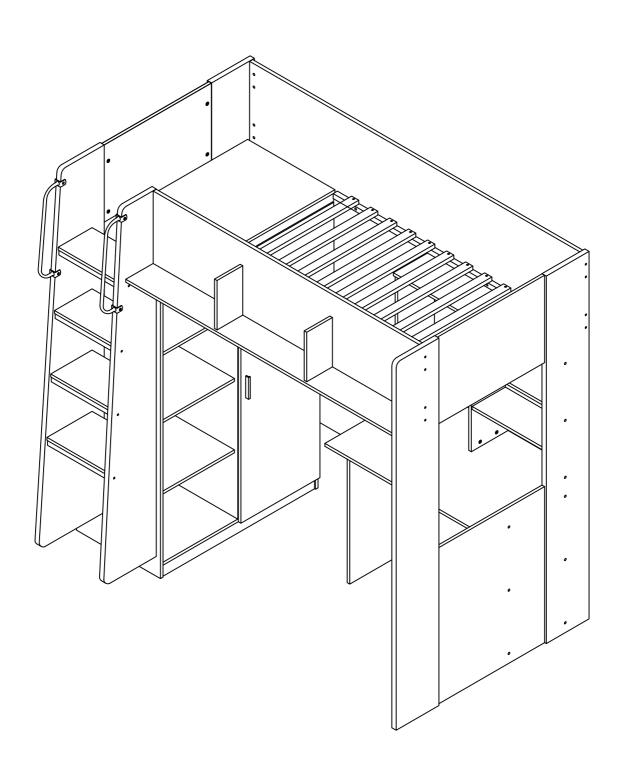

MODEL:SS 9048 WORKSTATION

HARDWARE LIST				
PART NO.	PART NAME		PCS	
Α	DOWEL Ø8x25mm		173	
В	KNBO DOWN FITTING	S OF STATE O	127set	
С	M6 x 13 JRN		16	
D	SHELF SUPPORT		8	
Е	OVAL BRACKET		2	
F	HANDLE		1	
G	HINGES		3	
Н	ROD HANGER x 430mm		1	
I	SCREW 45mm		2	
J	SCREW 14mm		22	
K	SCREW 20mm		2	
L	JCBC M6x25mm M6 x 13 JCN		12set	
M	JCBC M6x25 mm	(a) British Colored	29	

HARDWARE LIST				
PART NO.	PART NAME		PCS	
N	JCBC M6x60mm		16	
0	SCREW 25mm	(1)	2	
Р	JCBC M6x40mm M6 x 13 JCN		4set	
Q	JCBC M6x35mm		4	
R	JCBC M6x30mm M6 x 13 JCN		3set	
S	JCBC M6x30mm		2	
Т	JCBC M6x45mm	0	10	
U	ALLENKEY		3 /	

