
Model : Kansas
Product Size : 1080mm x 2080mm (Base Int Size)

Thank you for purchasing this product. Before starting assembly we suggest you spend a short time reading through this leaflet, then follow the simple step by step guide.Two people are required to assemble this product.

Max Weight Limit 90kg Per Bed

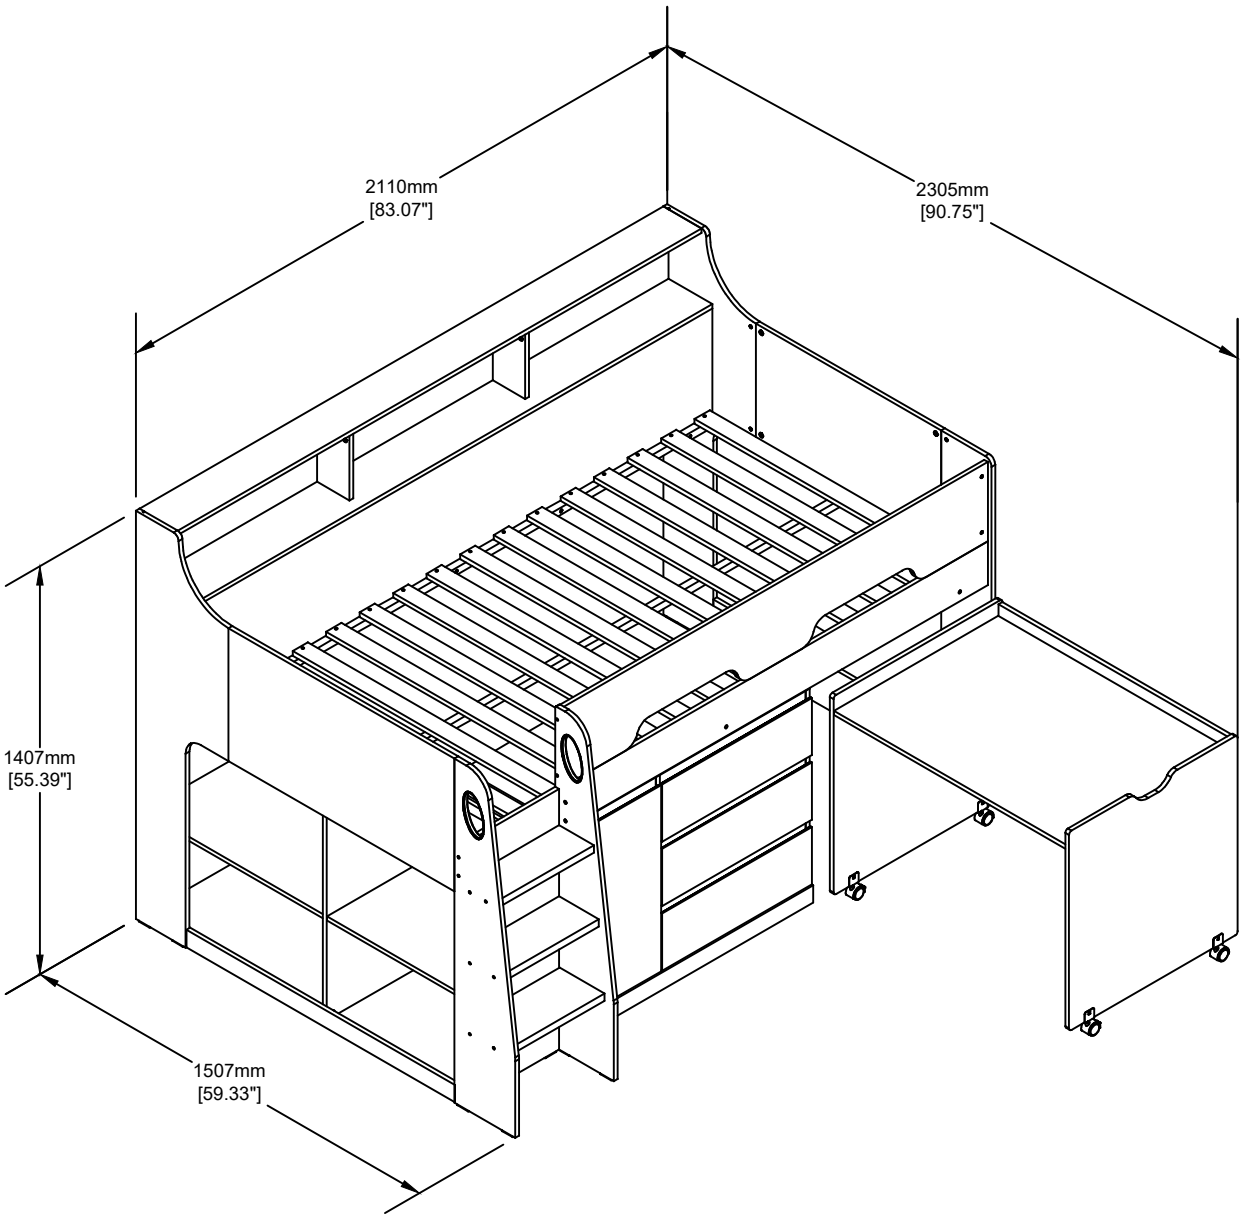

Model : Kansas
Product Size : 1080mm x 2080mm (Base Int Size)

TOP TIPS BEFORE YOU START ! **IMPORTANT - READ CAREFULLY & RETAIN FOR FUTURE REFERENCE**

1. Please check that all parts & hardware are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, you identify all the parts required for that step.
3. We recommend that where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
4. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a soft, smooth surface during assembly to prevent any damage.
5. During assembly please take care not to overtighten any fittings, as this may damage the product.

CARE AND MAINTENANCE OF YOUR FURNITURE

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (e.g hot drinks) directly on the wood surface.
- Please do not drag or pull your furniture.

IMPORTANT INFORMATION


1. Thickness of the mattress should not exceed 180mm.
2. Children should be discouraged from playing on top of this bunk bed.
3. The bunk bed should be checked periodically by the owner to ensure that the guardrail, ladder, and other components are maintained in the correct position and state of repair and that all connectors are tight.
4. A bunk bed is not to be placed near a ceiling fan unless the distance between the closest points on the ceiling fan bunk. Bed is at least 2 metres.
5. Use guardrails on both sides of the upper bunk.
6. Prohibit horseplay on or under bed(s).
7. Prohibit more than one person on upper bunk.
8. Use ladder for entering and leaving upper bunk.
9. If the bunk bed is placed next to the wall, the guardrail that runs the full length of the bed should be placed against The wall to prevent entrapment between the bed and the wall.
10. **WARNING:** Do not use the bunk bed/high bed if any structural part is broken or missing.
11. Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.
12. **WARNING:** High beds & the upper bed of bunk beds are not suitable for children under six years due to risk of injury from falls".
13. **WARNING:** Children can become trapped between bed & wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g.cupboard) and the like. To avoid risk of serious injury distance between top safety barrier and adjoining structure shall not exceed 75mm nor shall be more than 230mm".
14. Always follow the manufacturer's instructions.
15. A statement that vertilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.
16. All bunk beds and high beds intended to be assembled by other than the manufacturer or his/her representative shall include assembly instructions including a list of the parts supplied and details of any tools required to assemble the bed.

STRANGULATION HAZARD:

17. Never attach or hang items to any part of bunk bed that are not designed for use with the bed for example, but not limited to hook, belt and jump ropes.


Model : Kansas
Product Size : 1080mm x 2080mm (Base Int Size)

Tools Required For Assembly

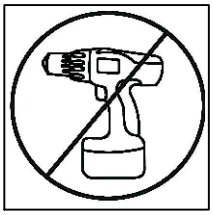

DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT. USE OF POWER TOOLS WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

Phillips Screw Driver

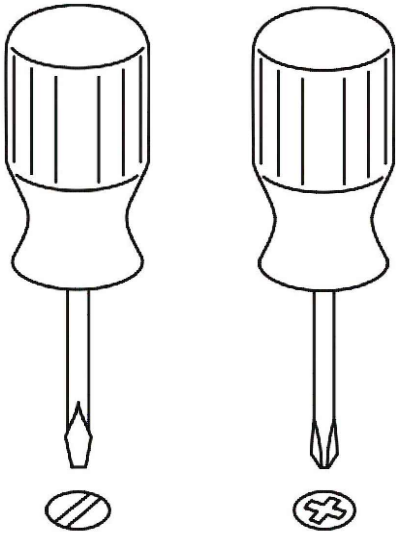




Approximately 3 hour





2 People Required


Rubber Hammer

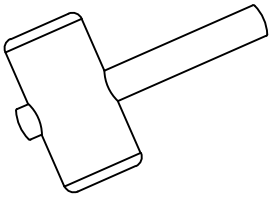

Tape Measure

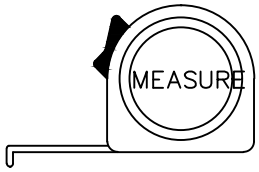

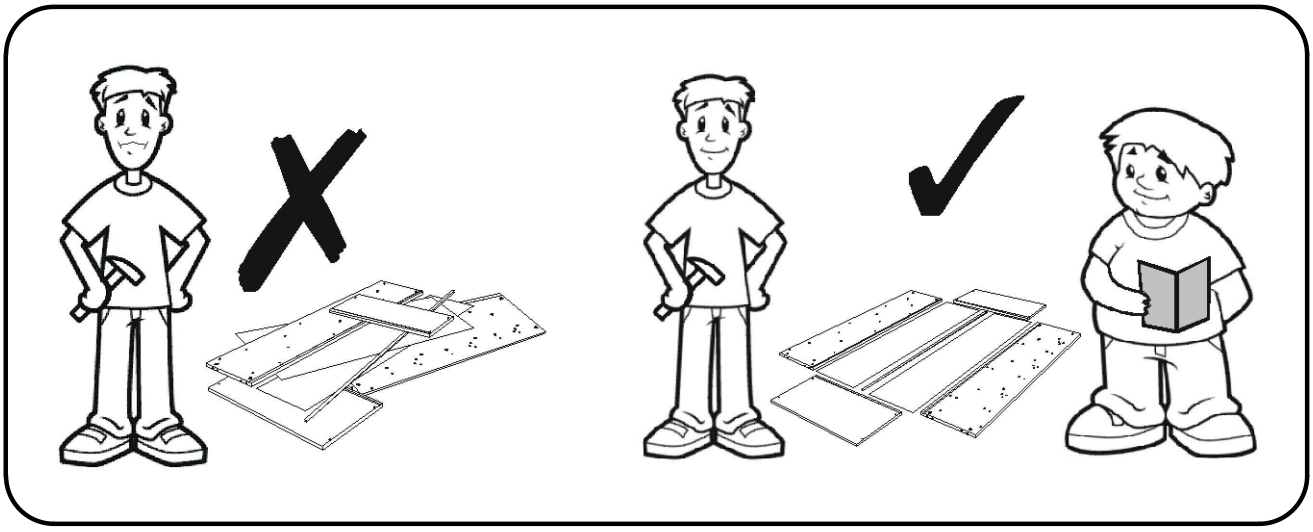

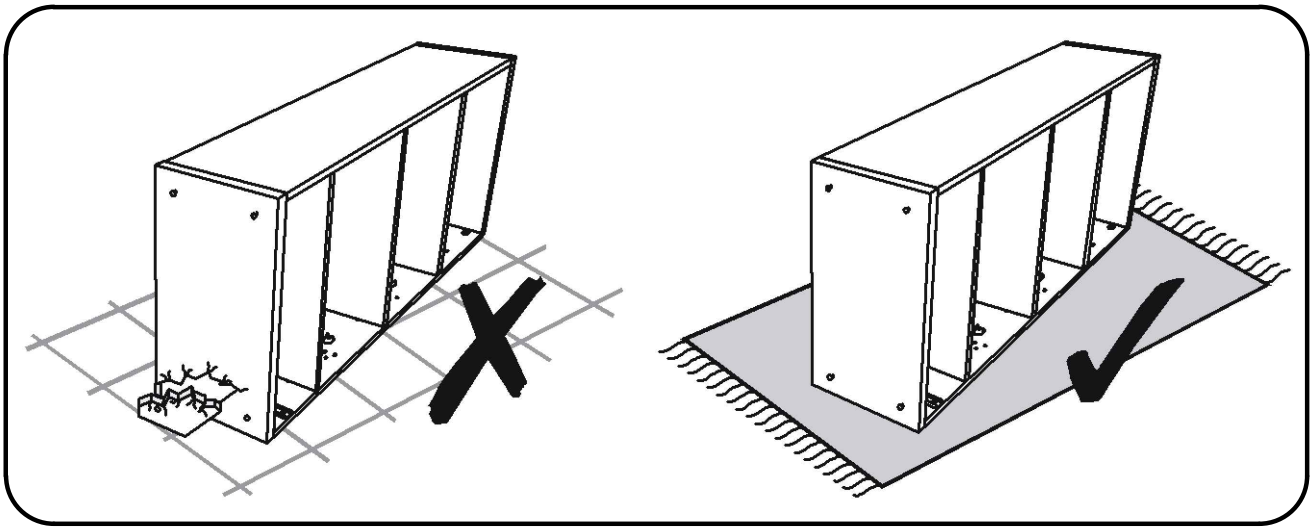

Part List
Model : Kansas

Carton 1 of 4

No.	Part Name	Pcs
16	1st Ladder Step	1
17	2nd Ladder Step	1
18	3rd Ladder Step	1
20	Plinth Panel (Cabinet)	1
21	Bottom Panel (Cabinet)	1
22	Bottom Panel (Cabinet)	1
23	Support Panel (Cabinet)	2
24	Support Panel (Cabinet)	1
25	Right Panel (Cabinet)	1
27	Center Panel (Cabinet)	1
28	Bottom Panel (Cabinet)	1
29	Support Panel (Cabinet)	1
30	Back Panel (Cabinet)	1
31	Left Panel (Cabinet)	1
32	Top Panel (Cabinet)	1
33	Back Panel (Drawer)	3
34	Left Panel (Drawer)	3
35	Right Panel (Drawer)	3
36	Bottom Panel (Drawer)	3
37	Front Panel (Drawer)	3
38	Door Panel (Drawer)	1
43	Support Panel	2
56	Moveable Panel (Cabinet)	1

Carton 2 of 4

No.	Part Name	Pcs
01	Center Panel (Open Shelf)	1
02	Bottom Panel (Open Shelf)	1
03	Center Panel (Open Shelf)	1
04	Right Panel (Open Shelf)	1
05	Back Panel (Open Shelf)	1
06	Left Panel (Open Shelf)	1
07	Bottom Panel (Open Shelf)	1
08	Center Panel (Open Shelf)	1
09	Back Panel (Open Shelf)	1
13	Left End Panel (Upper)	1
26	Back Panel (Cabinet)	1
44	Back Panel	3
47	Right End Panel (Upper)	1

Carton 2 of 4

No.	Part Name	Pcs
50	Bottom Panel (Desk)	1
51	Back Panel (Desk)	1
52	Back Panel (Desk)	1
53	Top Panel (Desk)	1
54	Left Panel (Desk)	1
55	Right Panel (Desk)	1

Carton 3 of 4


No.	Part Name	Pcs
10	Top Back Panel (Open Shelf)	1
11	Top Front Panel (Open Shelf)	1
12	Left End Panel (Bottom)	1
14	Left End Panel (Back)	1
15	Ladder Left Panel	1
19	Ladder Right Panel	1
39	Front Side Panel	1
40	Front Side Panel (Upper)	1
41	Back Side Panel	1
42	Bottom Panel	1
45	Top Panel	1
46	Right End Panel (Bottom)	1
48	Right End Panel (Back)	1
49	Right End Panel (Front)	1
57	Metal Side Rail	2
58	Center Support Rail	1

Carton 4 of 4

	Part Name	Pcs
	Bed Slats	16

Assembly Instructions + Fitting List

Part List
Model : Kansas

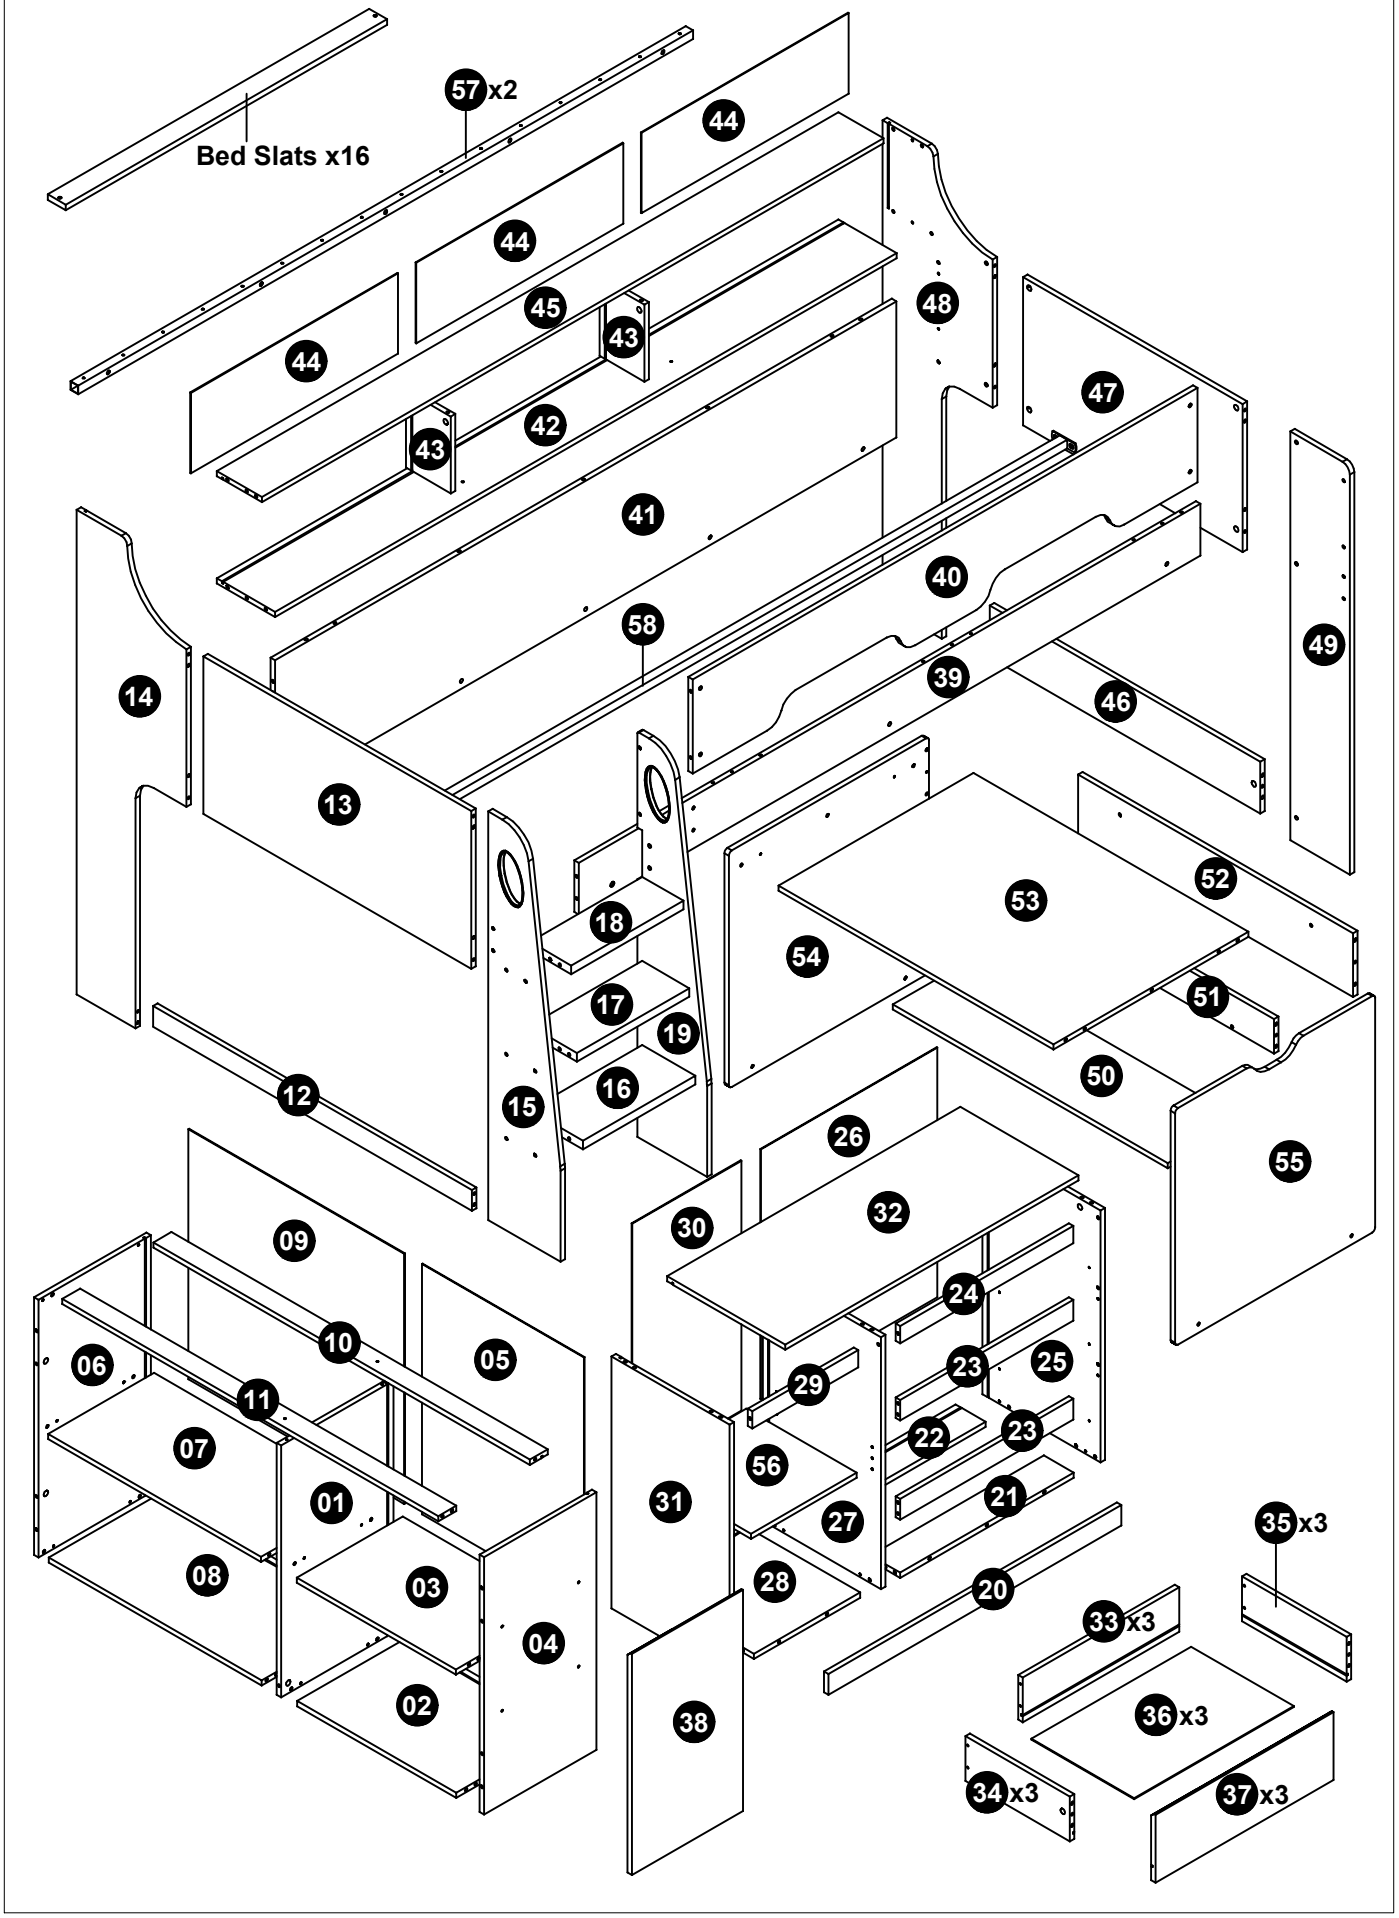

Fitting List
Model : Kansas

Carton 4 of 4			
Fitting List			
No.	Part Name		Qty
A	Cam		90
B	Cam Stud (**small**)		78
C	Contractfix Dowel		12
D	M8 x 25mm **Wood** Dowel		115
E	M6 x 45mm **Wood** Dowel		9
F	45mm Chipboard Screw		8
G	38mm Chipboard Screw		12
H	22mm Chipboard Screw		20
J	14mm Chipboard Screw		54
K	14" Drawer Slide (**SJ**)		3 set
L	Hinges Arm		2 set
M	PVC Back Support		20
N	PVC L Bracket		4
P	U Shape Caster with Lock		4
Q	25mm Allen Bolt		4
R	M6 Cap Nut		4
S	M6 x 13mm Baller		18
T	M6 Round Nut		16
U	M6 x 50mm Allen Bolt		22
V	Metal Shelf Support		4
W	M6 x 35mm Allen Bolt		9
X	M6 x 30mm Allen Bolt		33
Y	M6 x 12mm Allen Bolt		8
Z	M6 JCN Nut		6
A1	M6 Allen Wrench		2
A2	Spanner		1
A3	Metal Plate (**MG 006**)		1
A4	Felt Pads (**45 x 14mm**)		22
A5	M8 x 30mm **Wood** Dowel		6
A6	Sticker 25mm		14

Caution

There are many small components used in the construction of this unit.These loose items should be kept away from young children whilst assembling your unit. As an extra precaution, screw cover caps should be permanently fixed in position.(Where applicable)


USEFUL HINTS & TIPS

Two people will be required to assemble this unit

Please keep this assembly instruction for future reference

Guide To Assembly
Model : Kansas

1

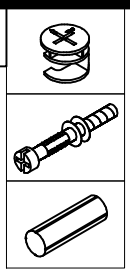


A x 10

B x 10

D x 22

WHEN FITTING CAM STUD


ENSURE THE CAM STUD IS FULLY TIGHTEN IN

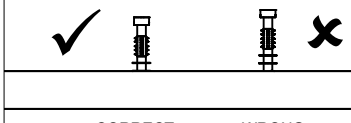


CORRECT WRONG

WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

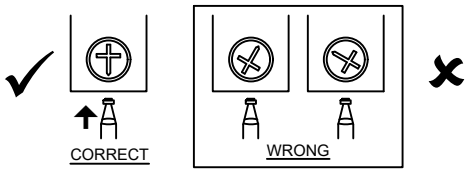



CORRECT WRONG

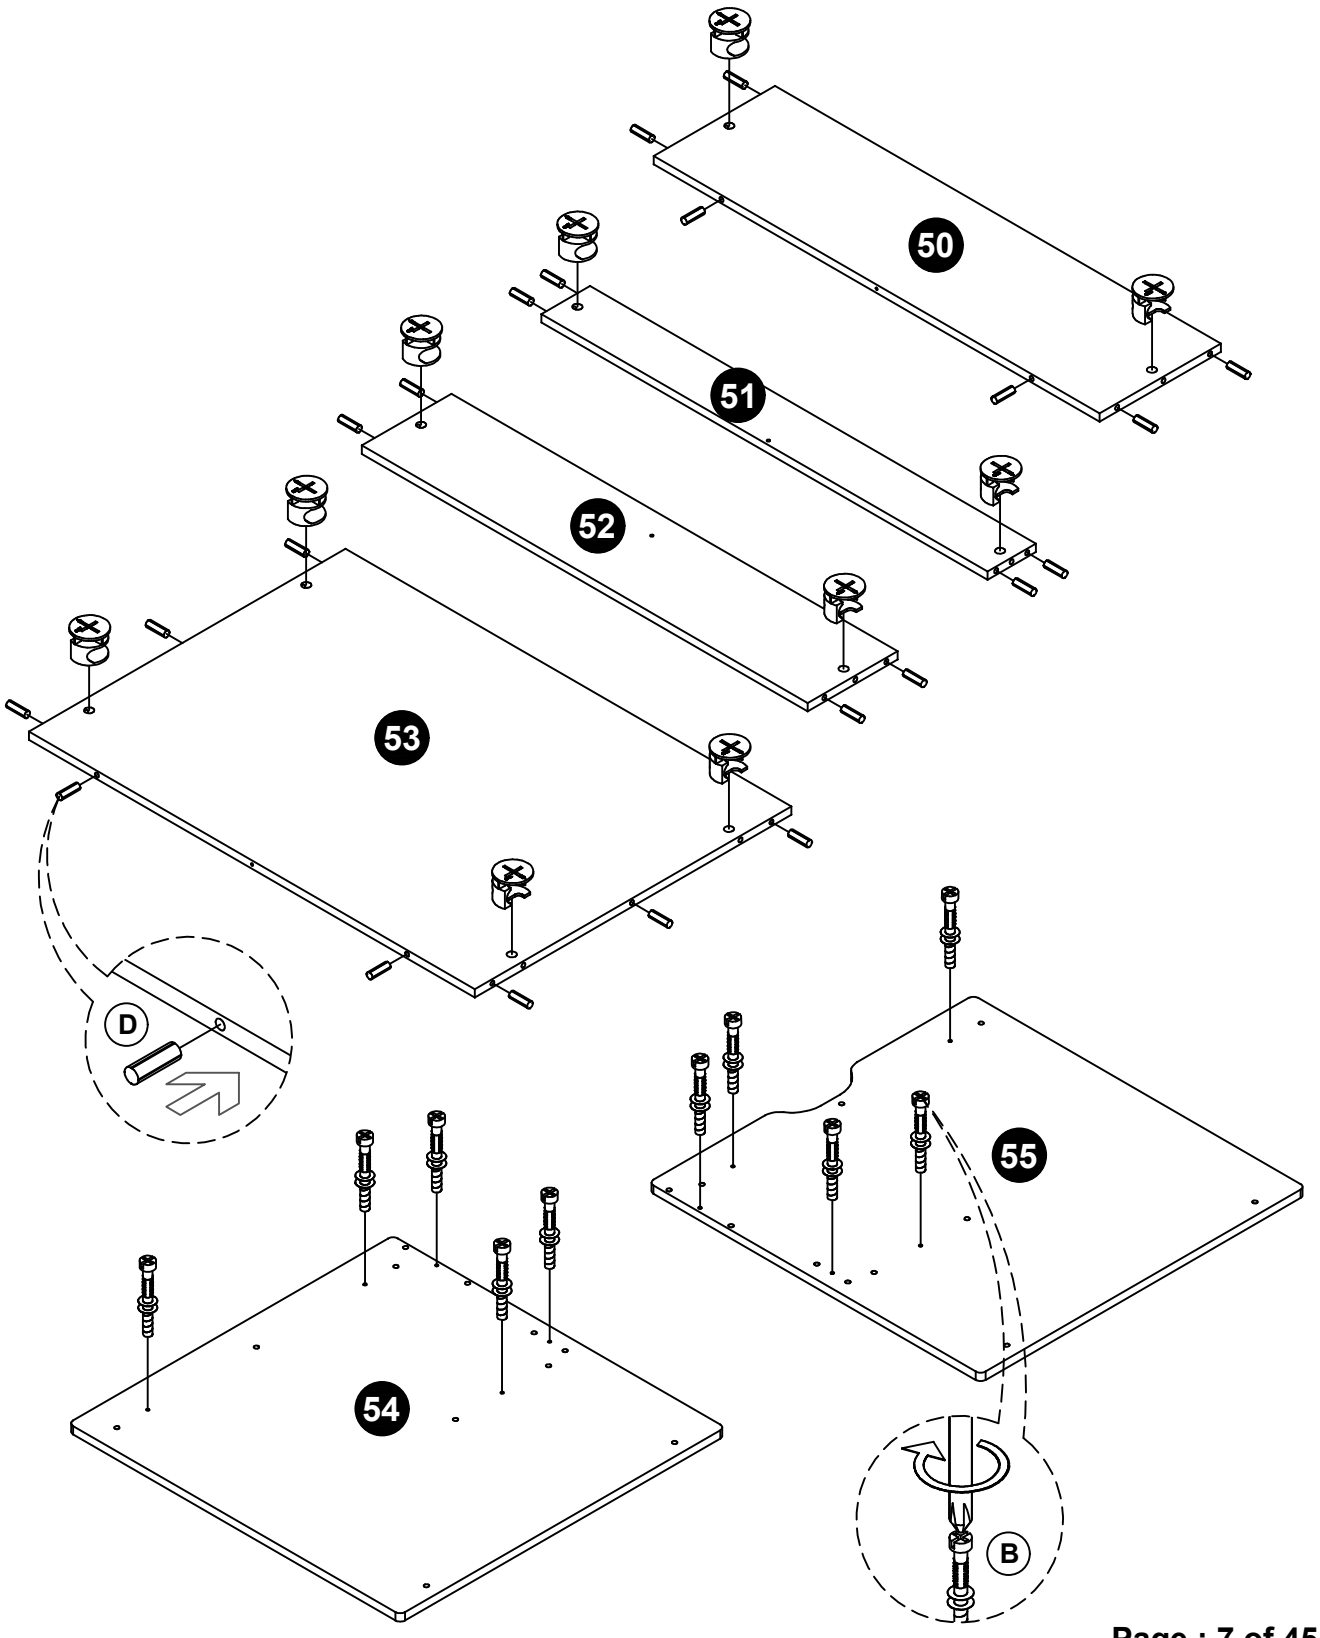


Guide To Assembly
Model : Kansas


2  F x 1

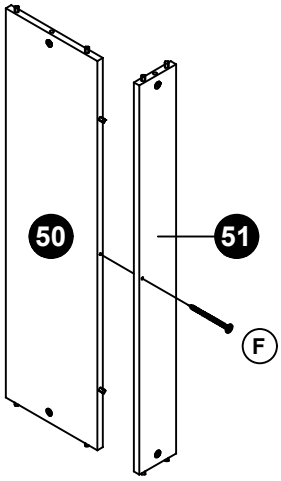


3  F x 1

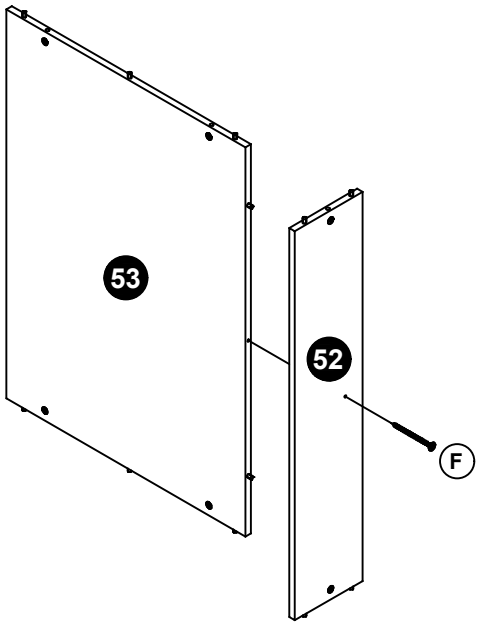

4

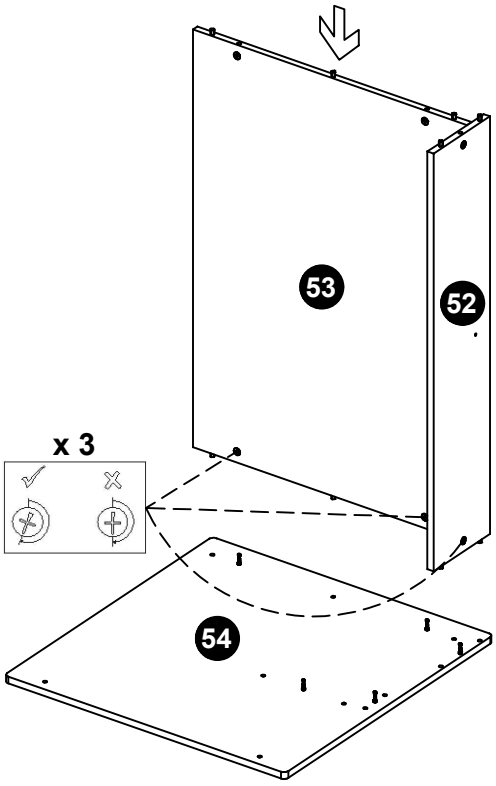


5

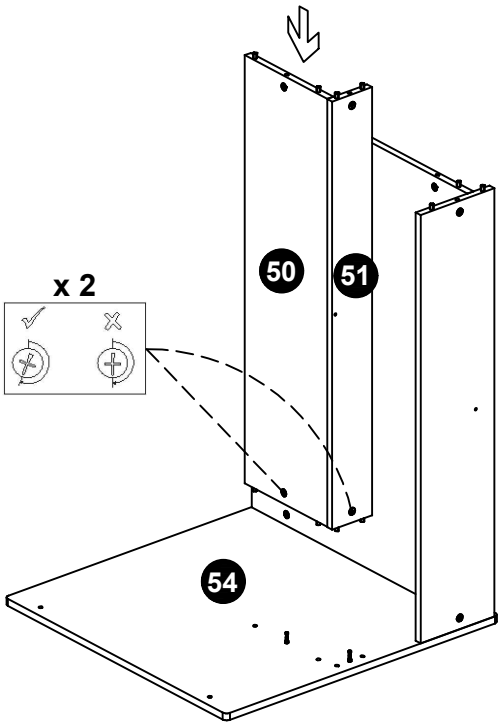



Guide To Assembly
Model : Kansas


6

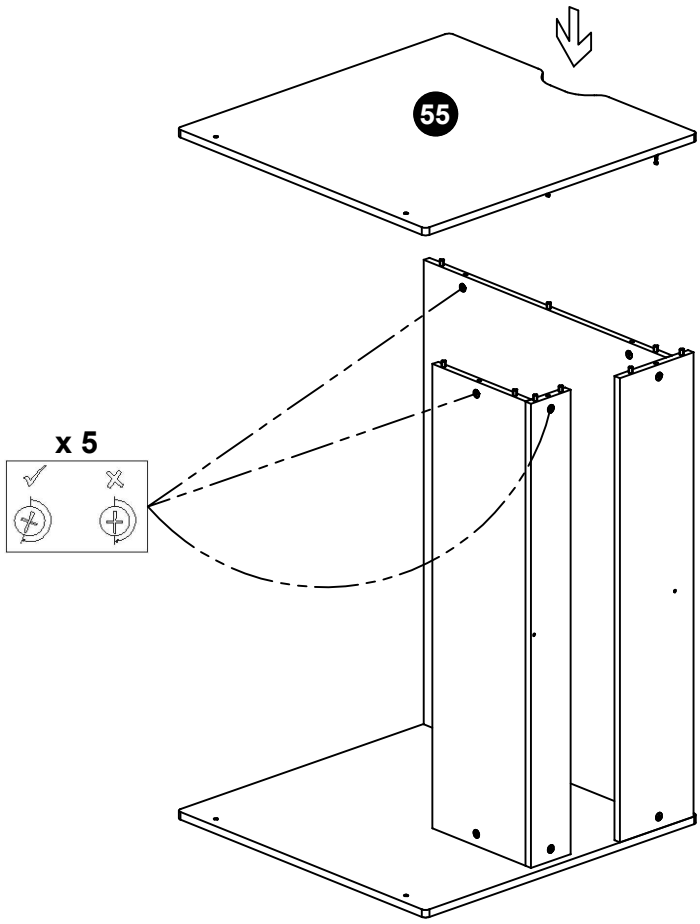


7


P x 4



Q x 4


R x 4


A2 x 1

Guide To Assembly
Model : Kansas

8

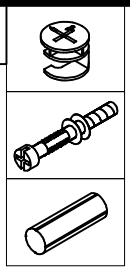


A x 13

B x 5

D x 18

WHEN FITTING CAM STUD


ENSURE THE CAM STUD IS FULLY TIGHTEN IN




CORRECT WRONG

WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

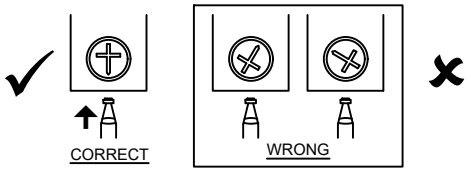

CORRECT WRONG

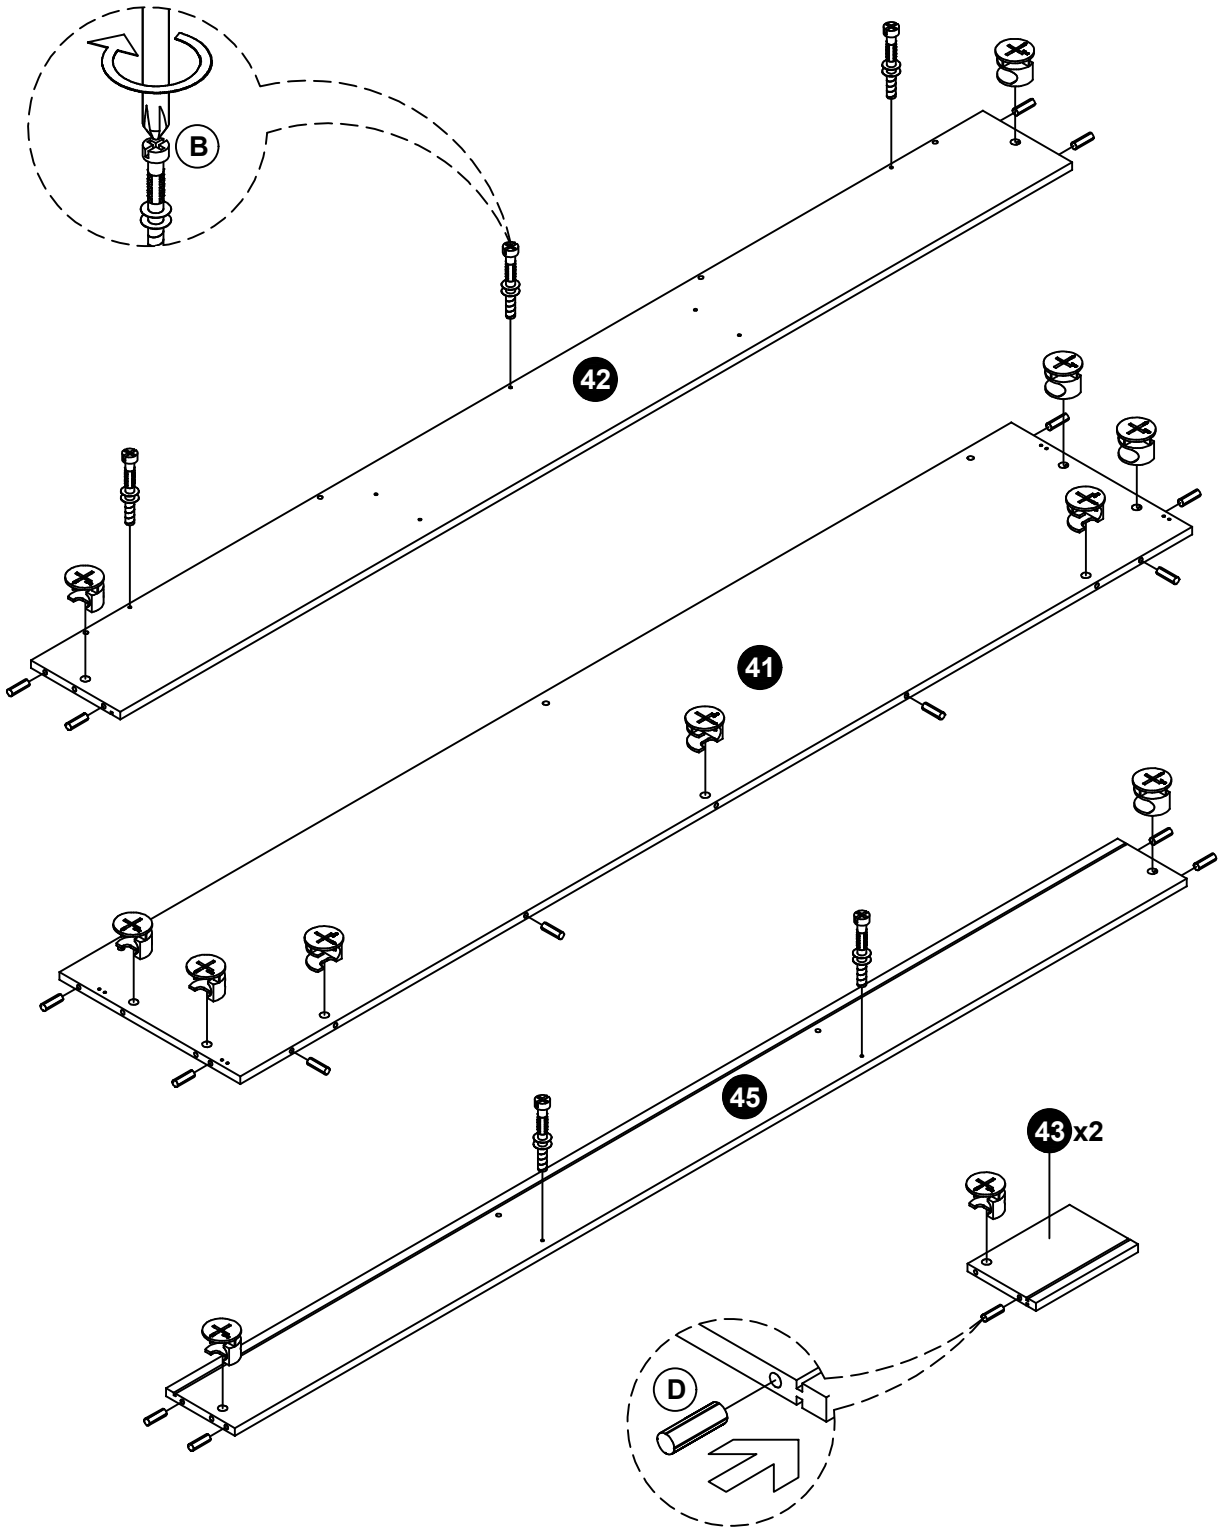


9

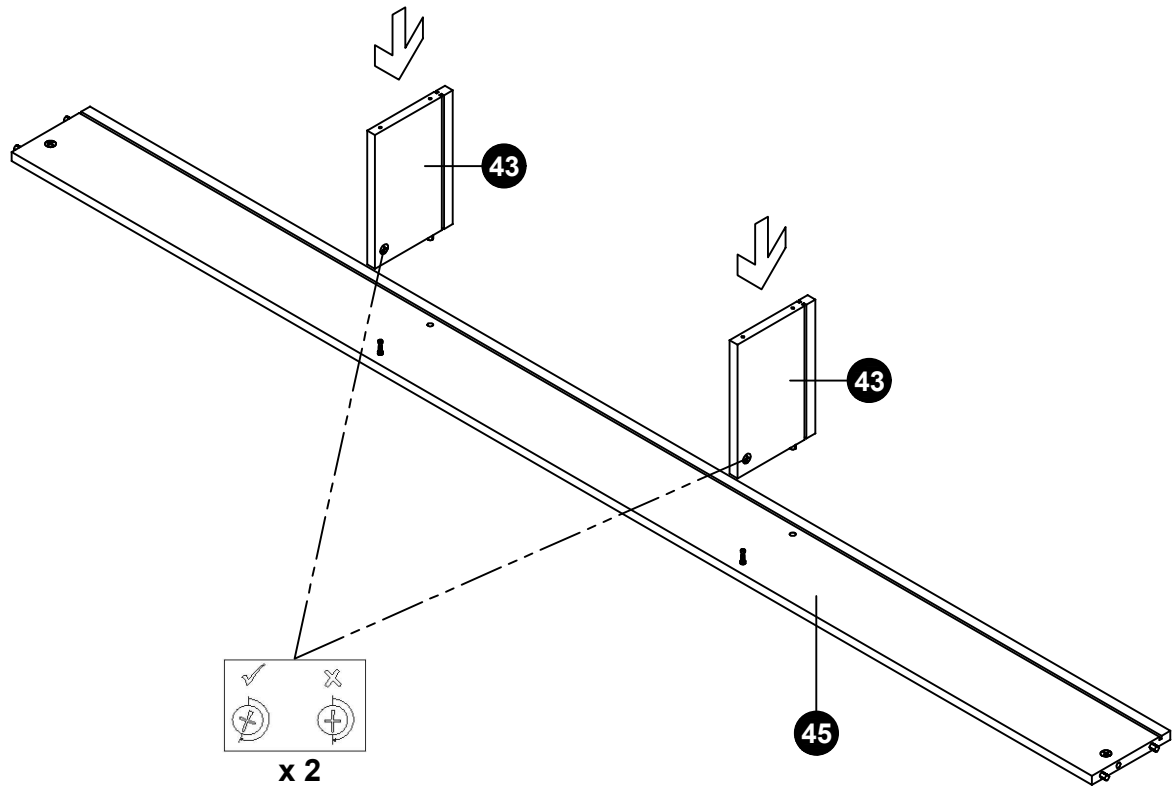


x 2

10

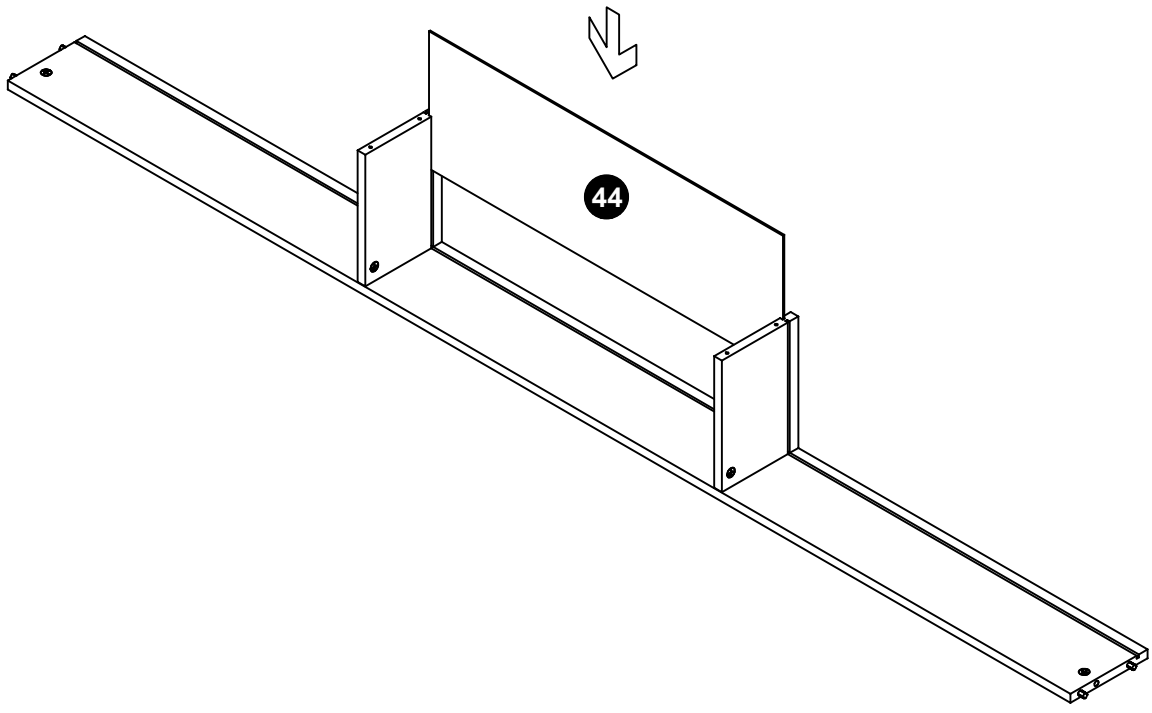


Guide To Assembly
Model : Kansas


11  F x 4

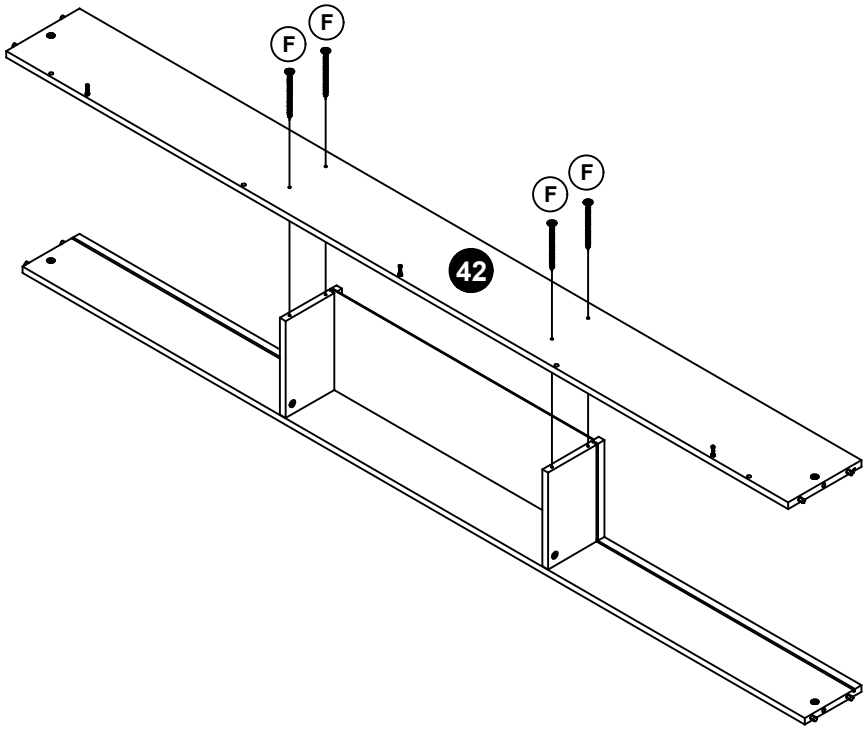


12

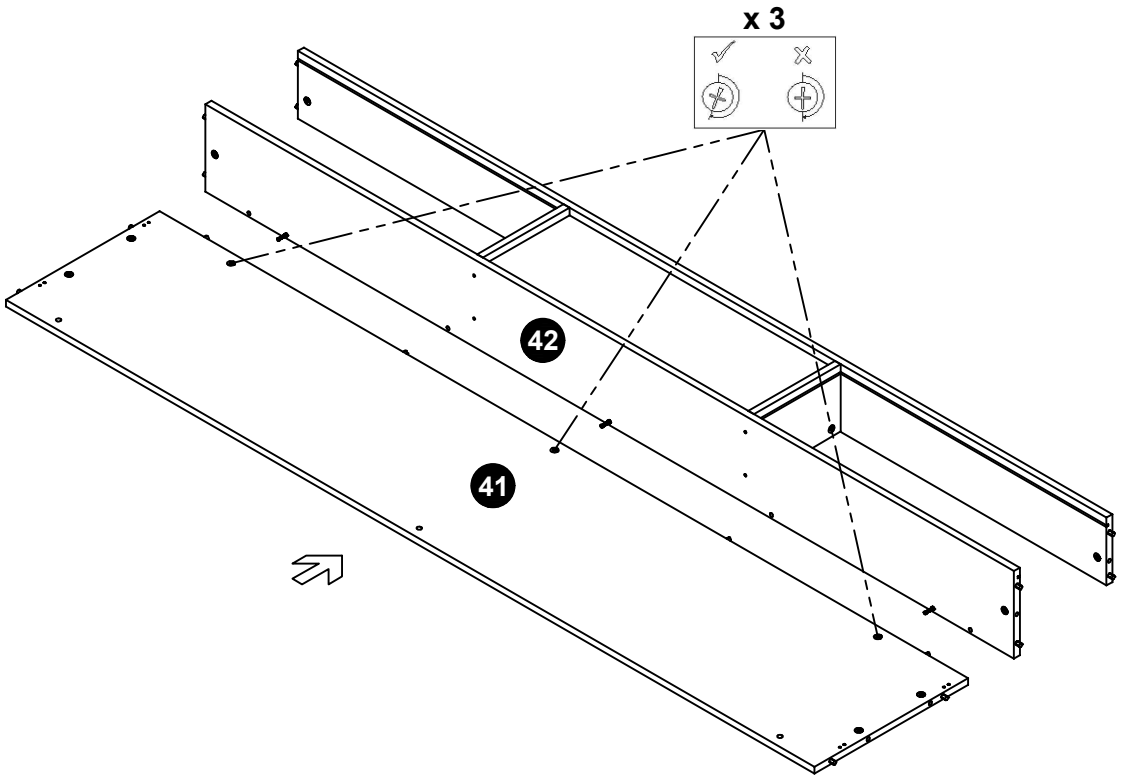


Guide To Assembly
Model : Kansas


13  E x 9

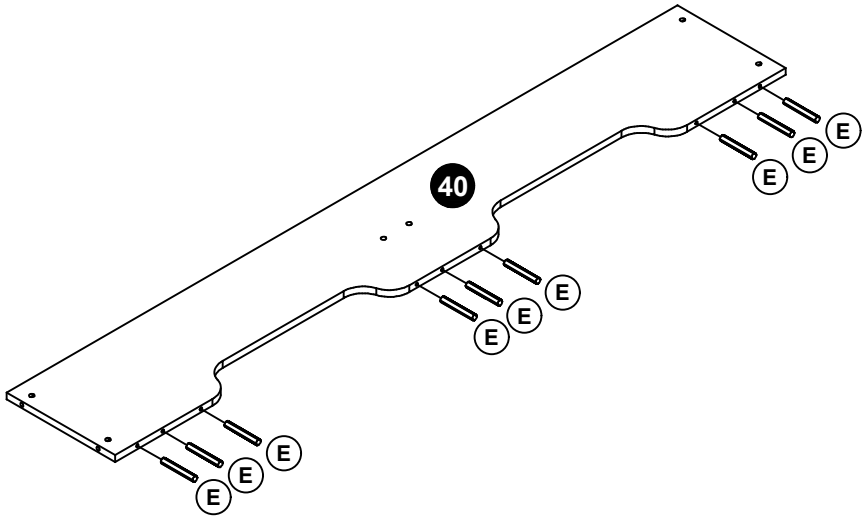


14

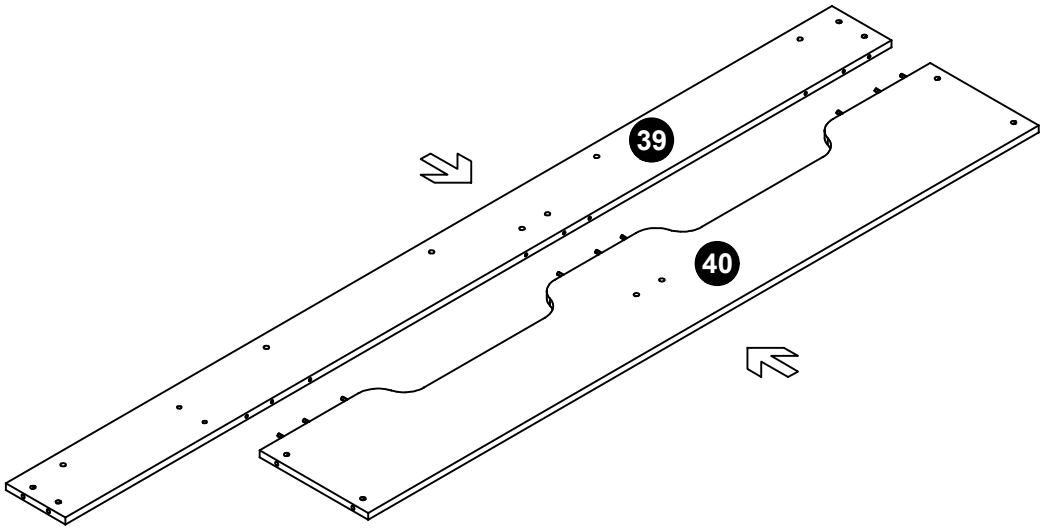


15  Y x 4

 A3 x 1


Guide To Assembly
Model : Kansas

16  A4 x 10

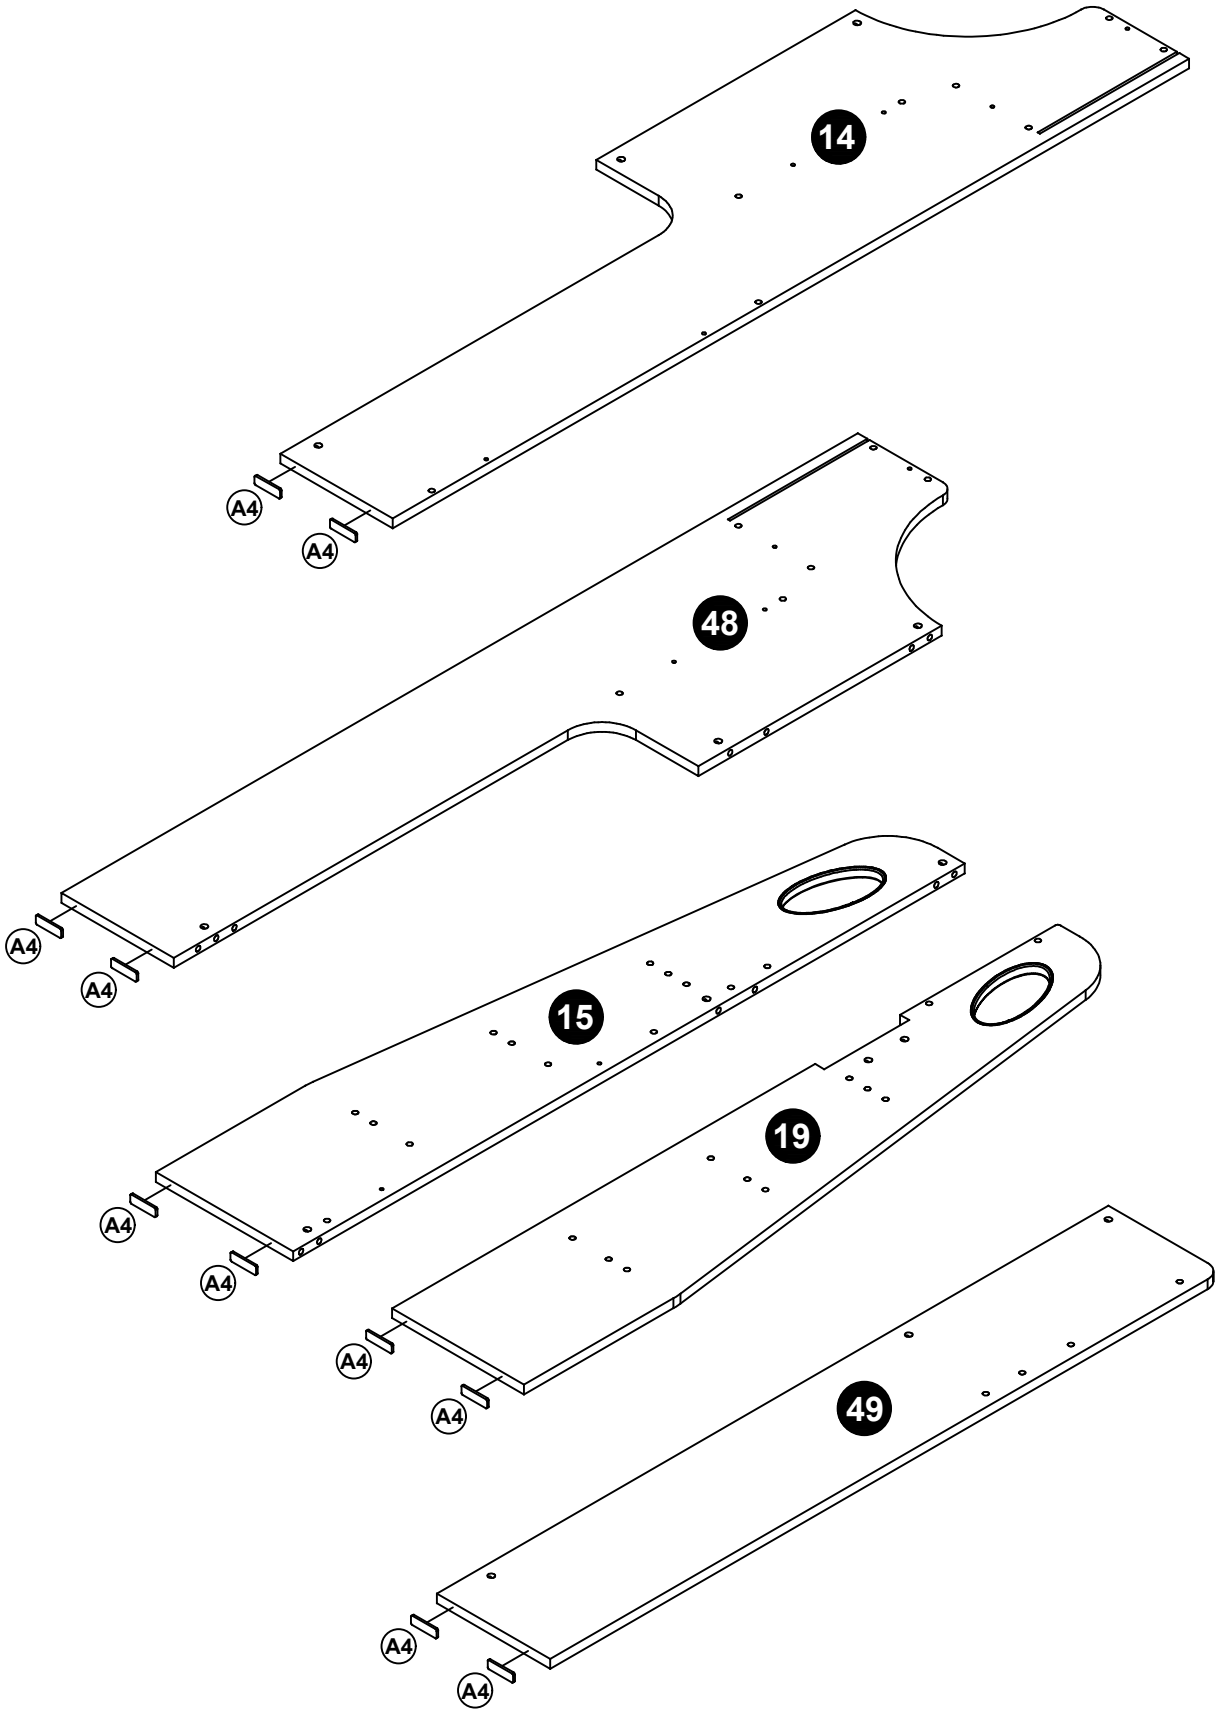


Guide To Assembly
Model : Kansas


17



B x 12



C x 12



S x 12

WHEN FITTING CAM STUD


ENSURE THE CAM STUD IS FULLY TIGHTEN IN




CORRECT WRONG


WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

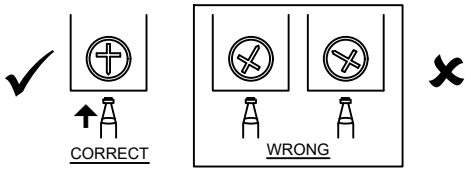


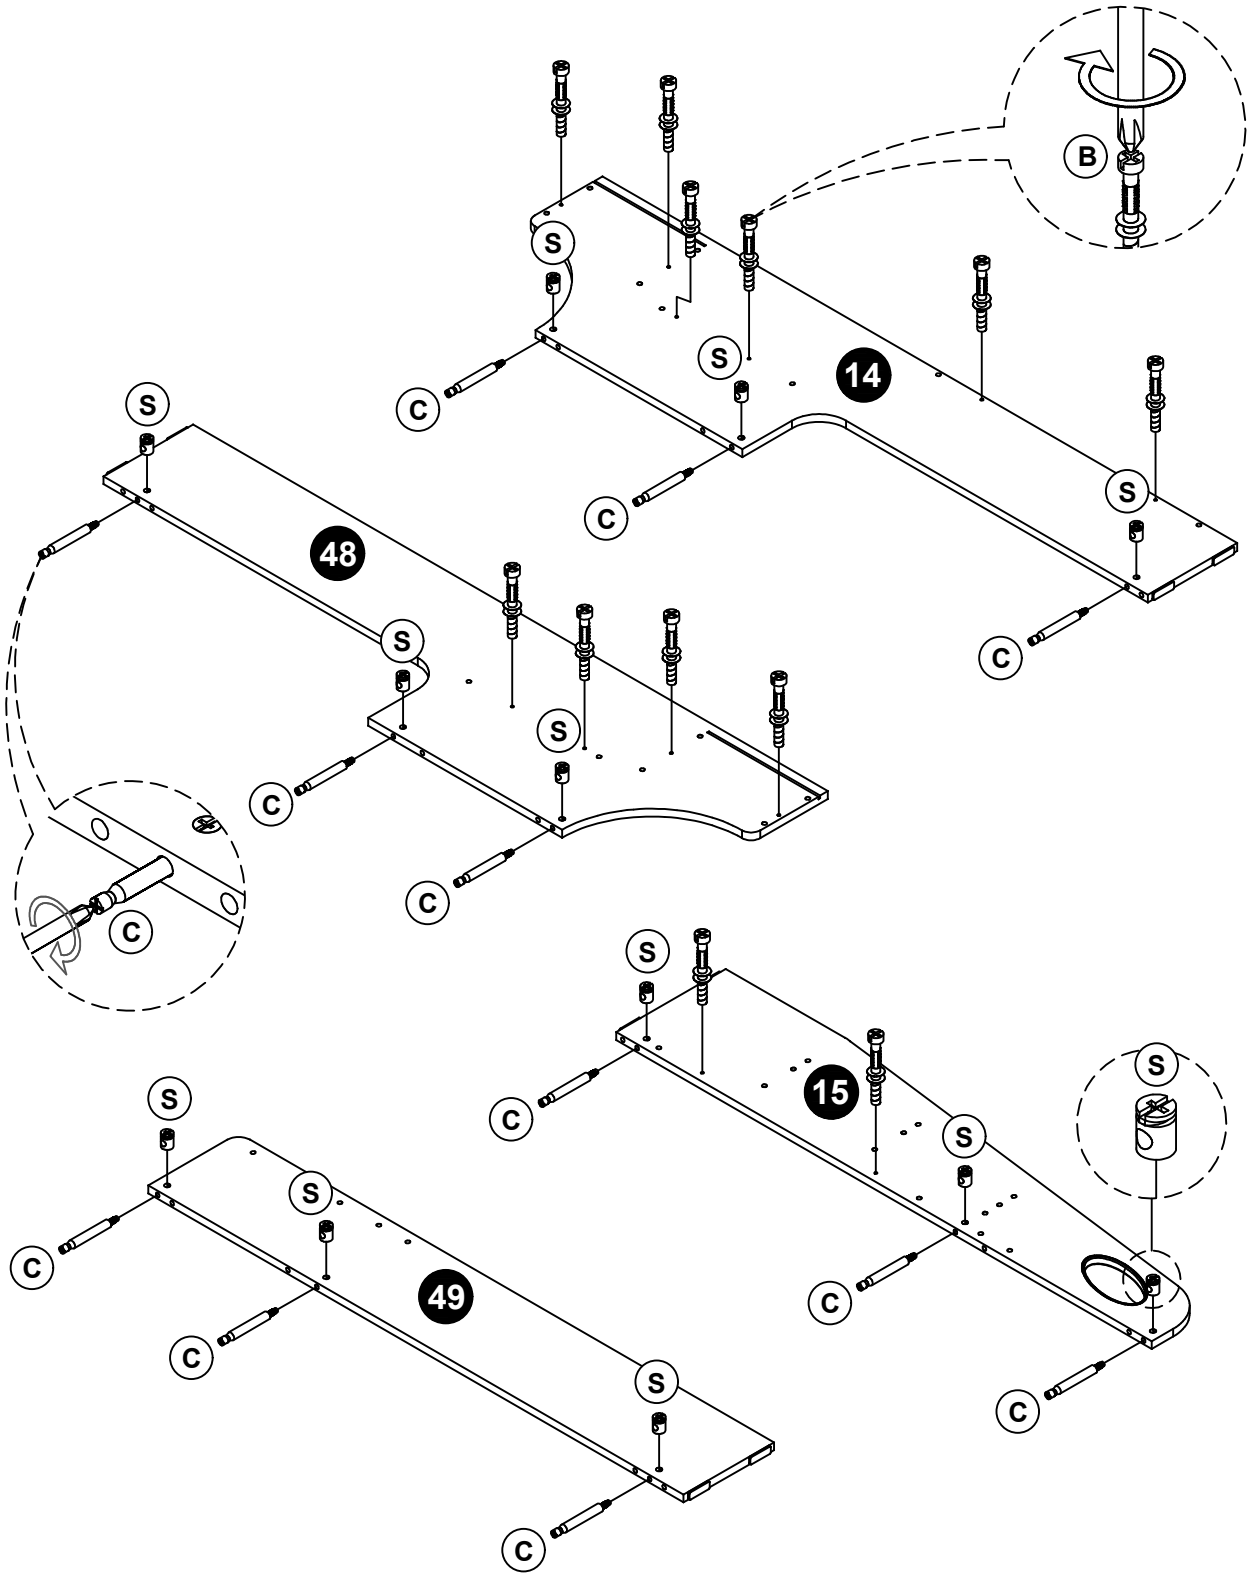

18

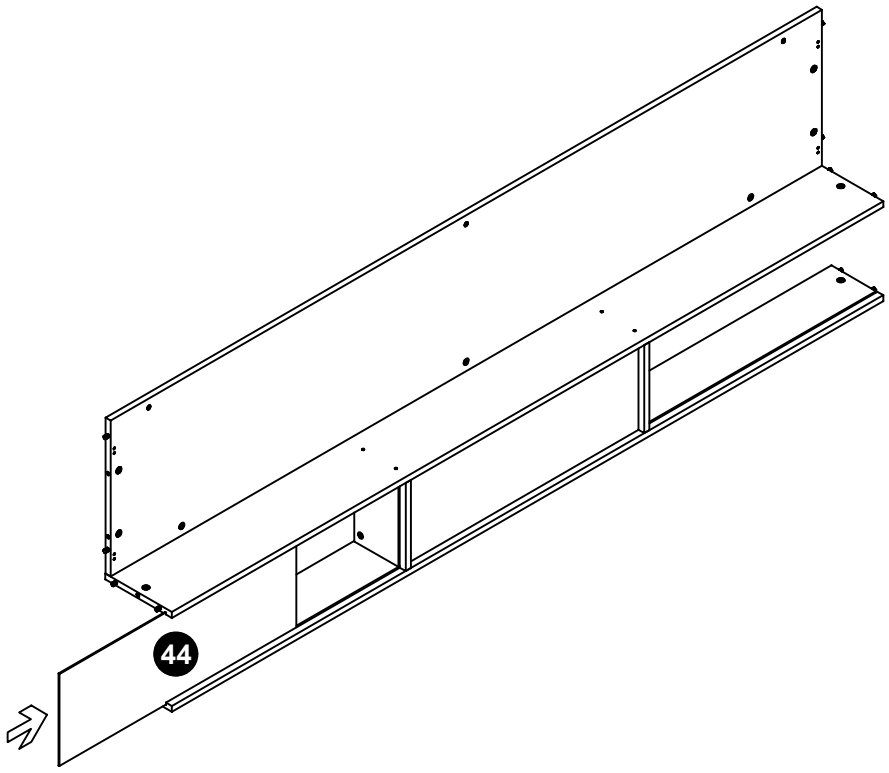


19

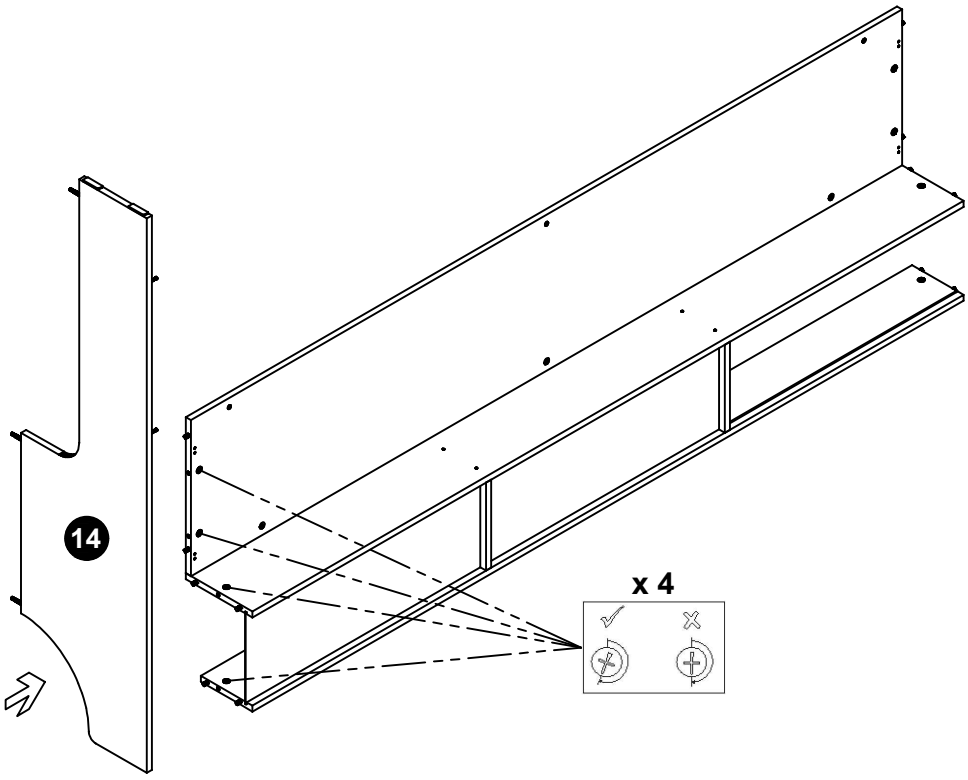


Guide To Assembly
Model : Kansas

20

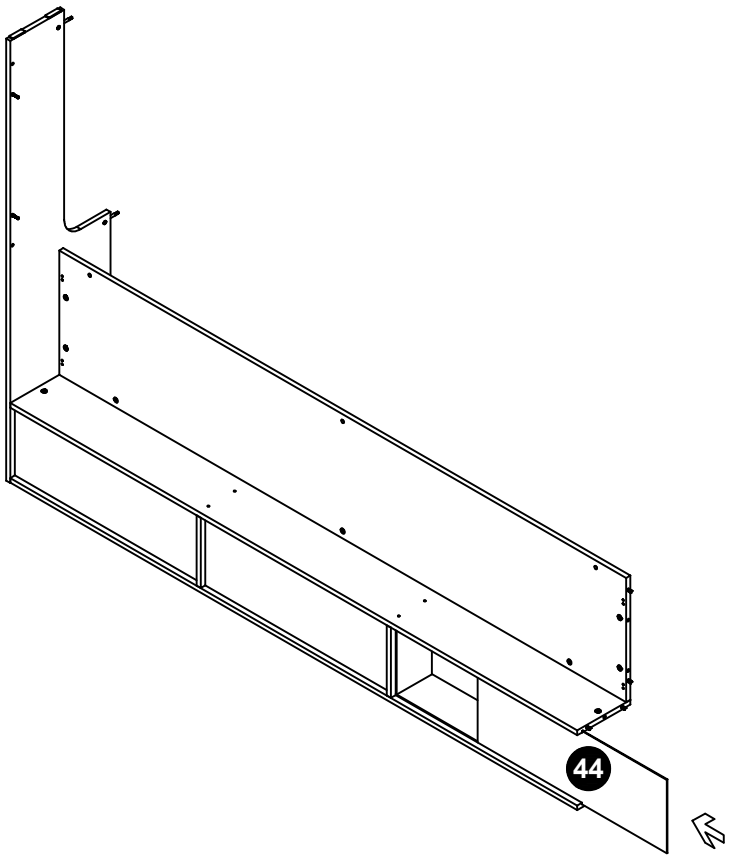

21

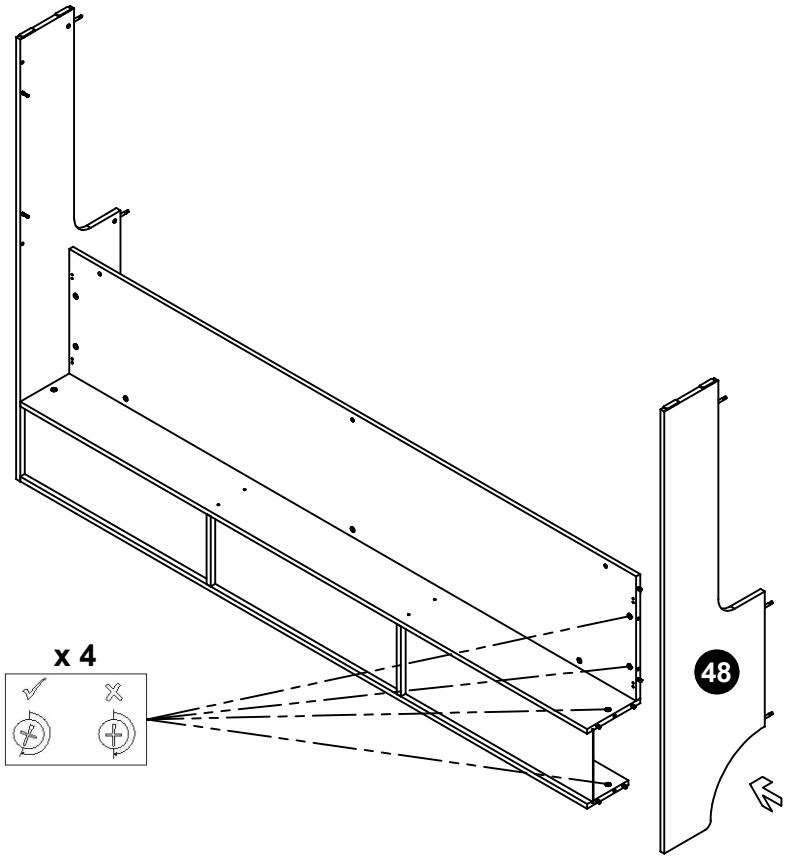

Guide To Assembly
Model : Kansas


22



J x 16



N x 4

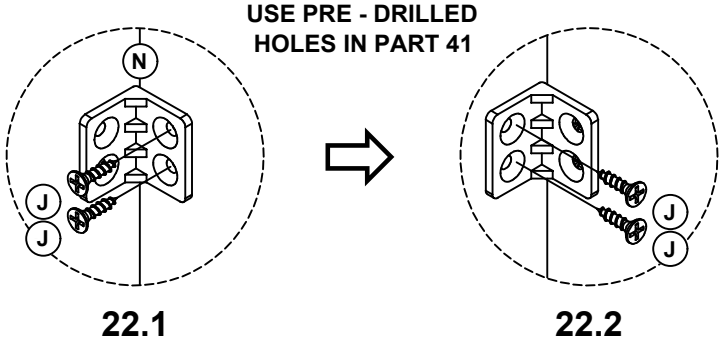



22.1 **22.2**


Guide To Assembly
Model : Kansas

23


A x 16



B x 1


D x 14


A5 x 4


WHEN FITTING CAM STUD

ENSURE THE CAM STUD IS FULLY TIGHTEN IN




WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

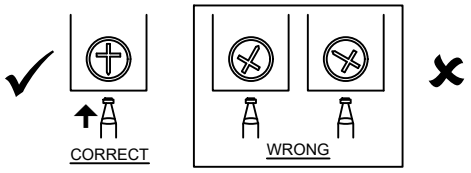

24

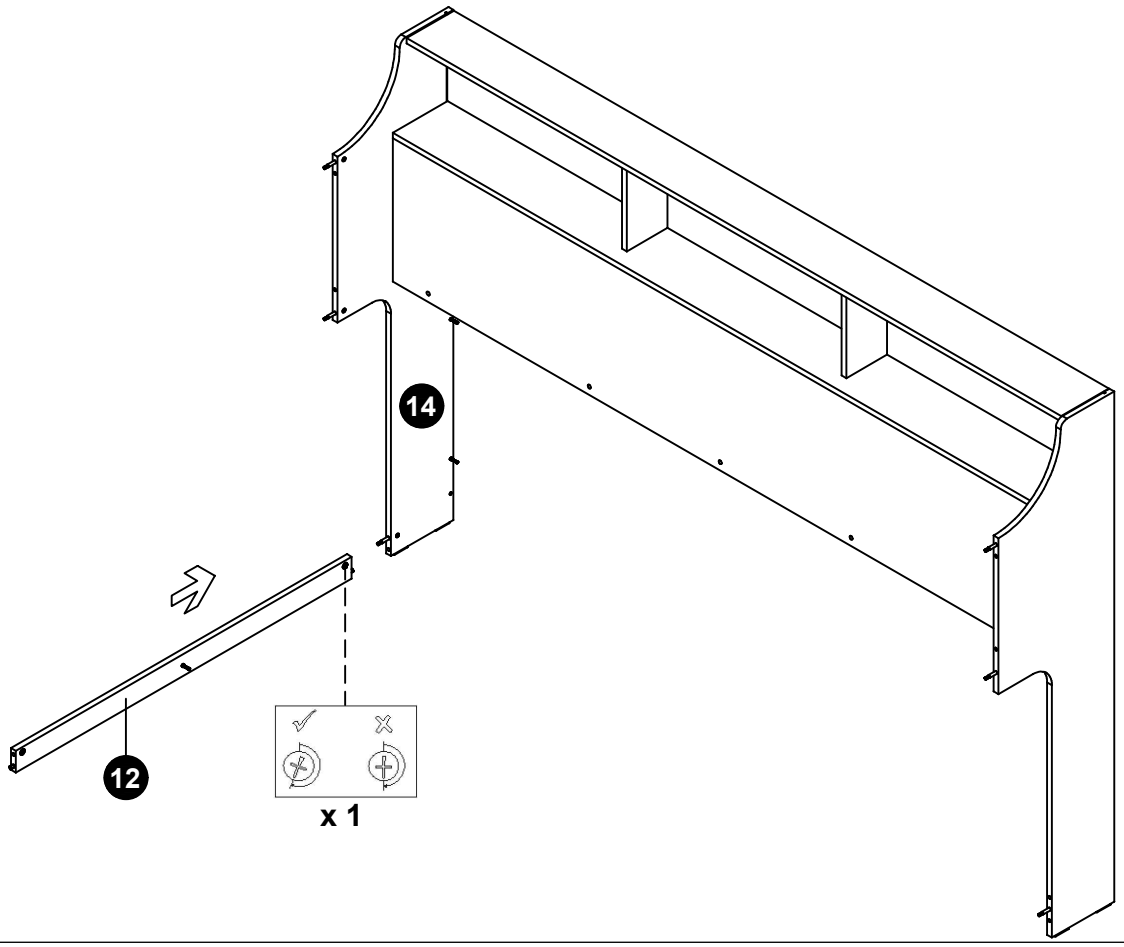


25

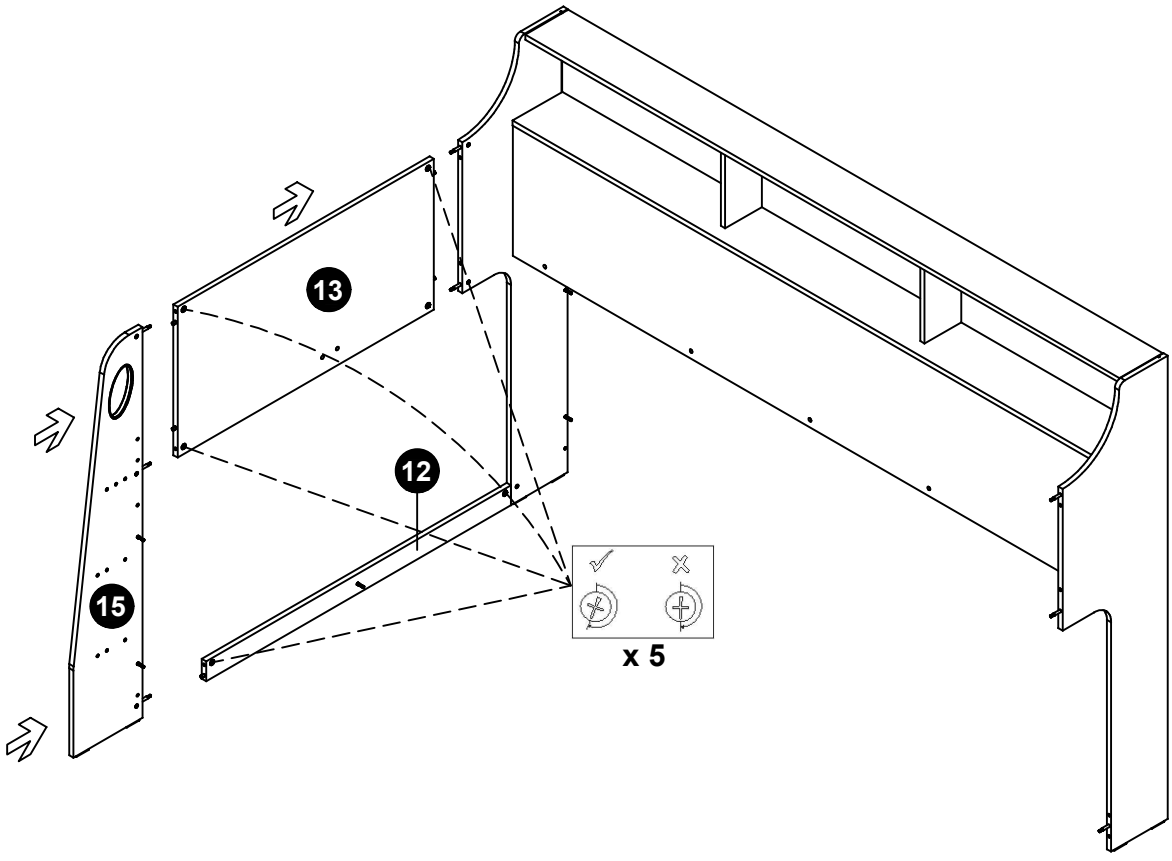

Guide To Assembly
Model : Kansas

26

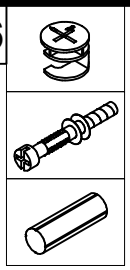


A x 25


B x 16

D x 22

WHEN FITTING CAMS


ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

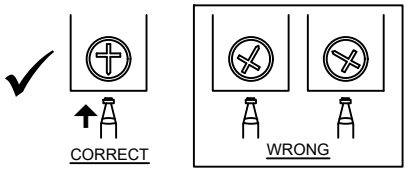

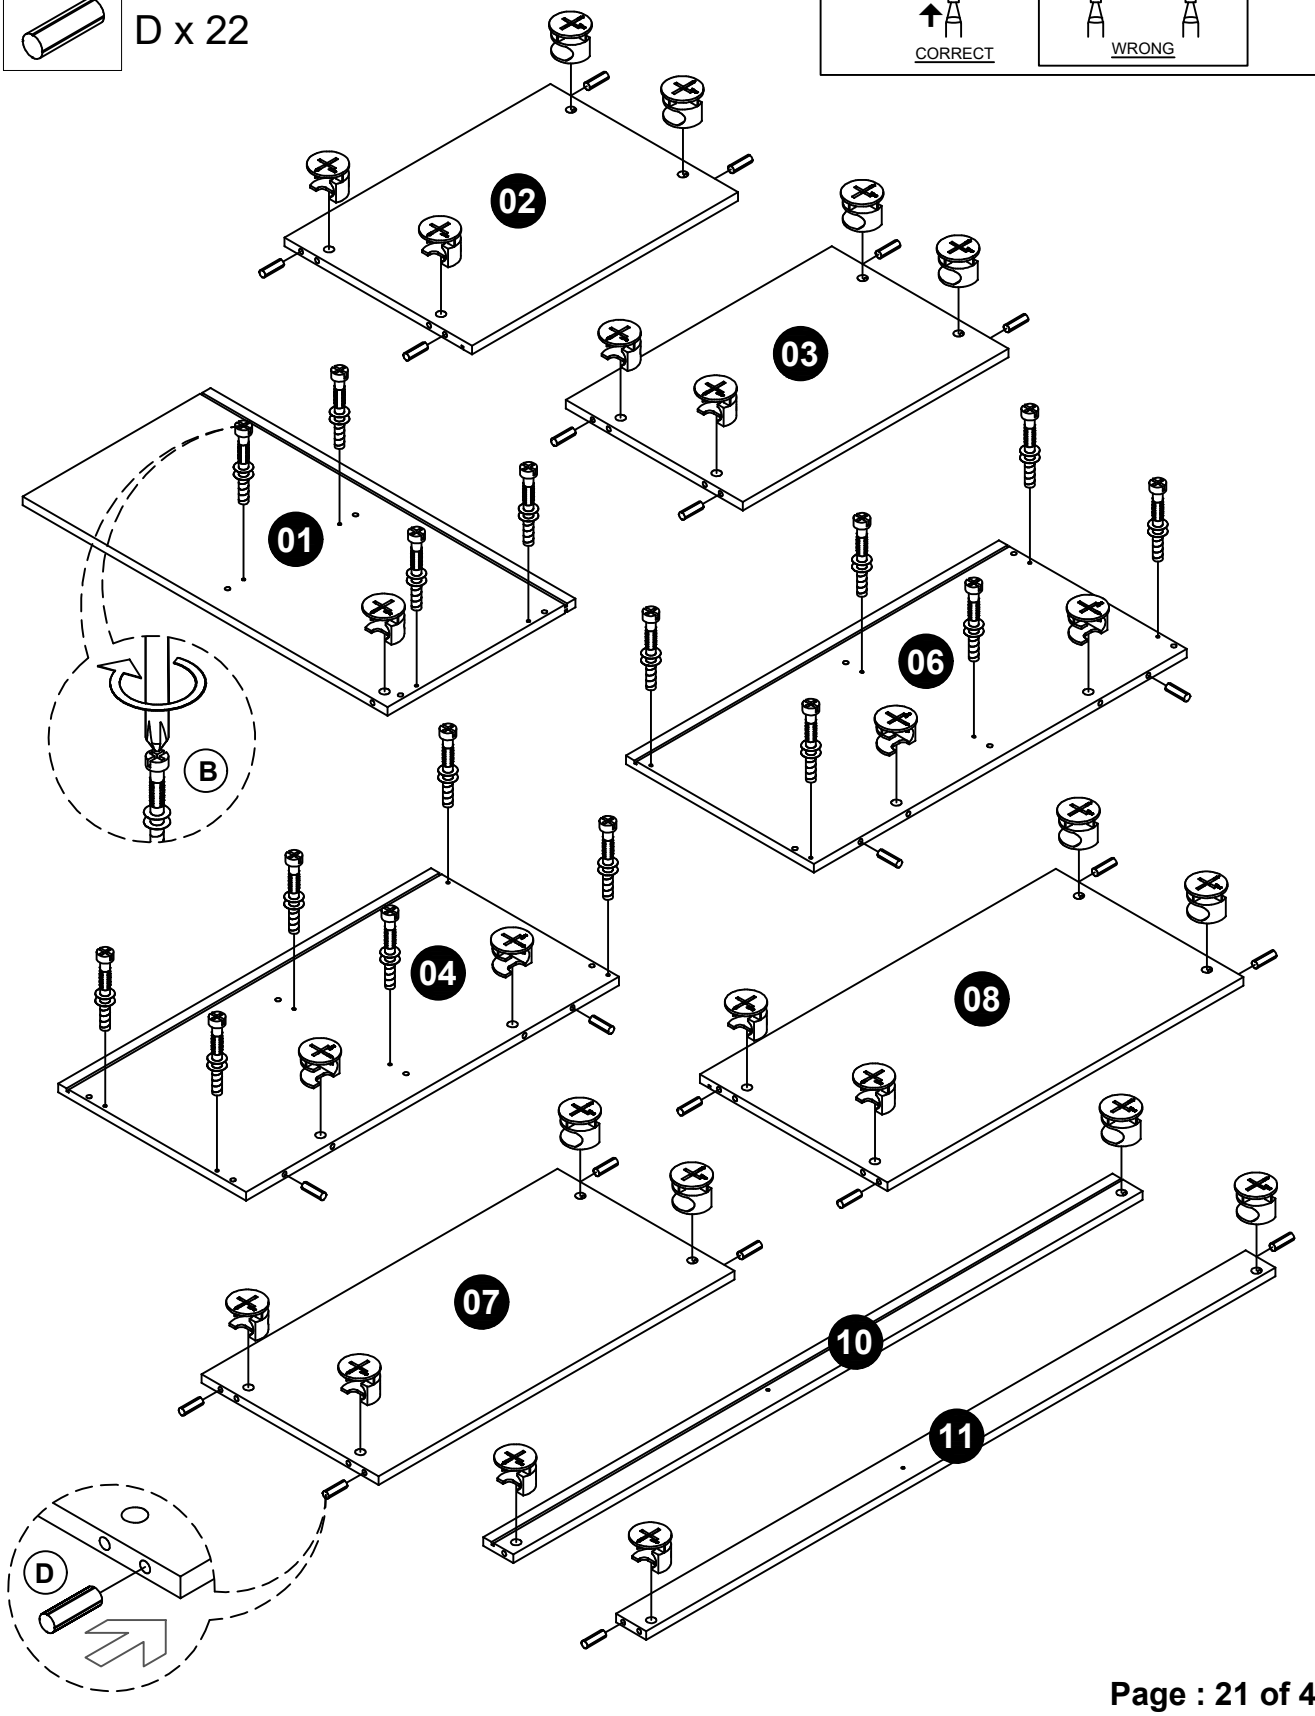


Guide To Assembly
Model : Kansas


27

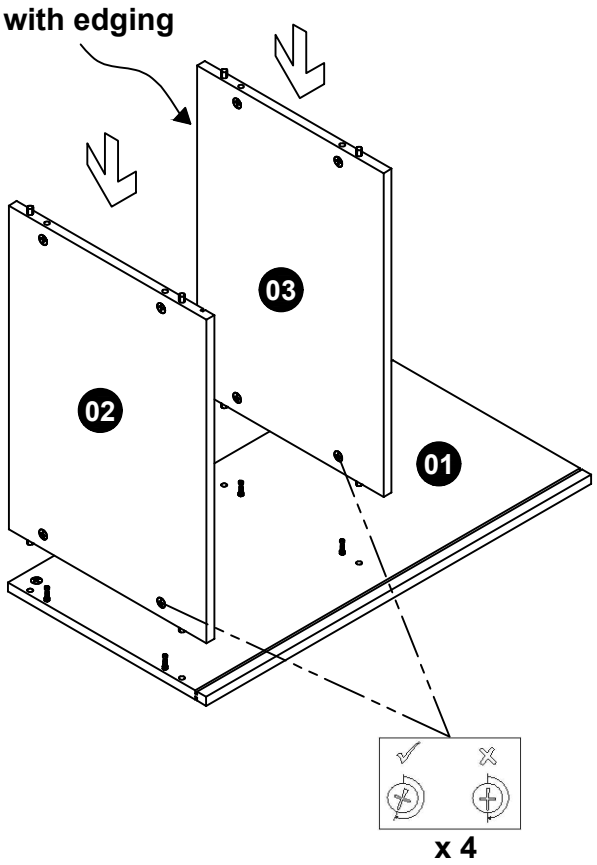


28




F x 2

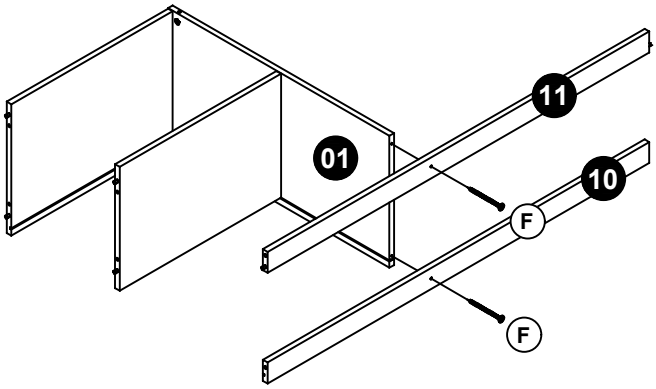

29

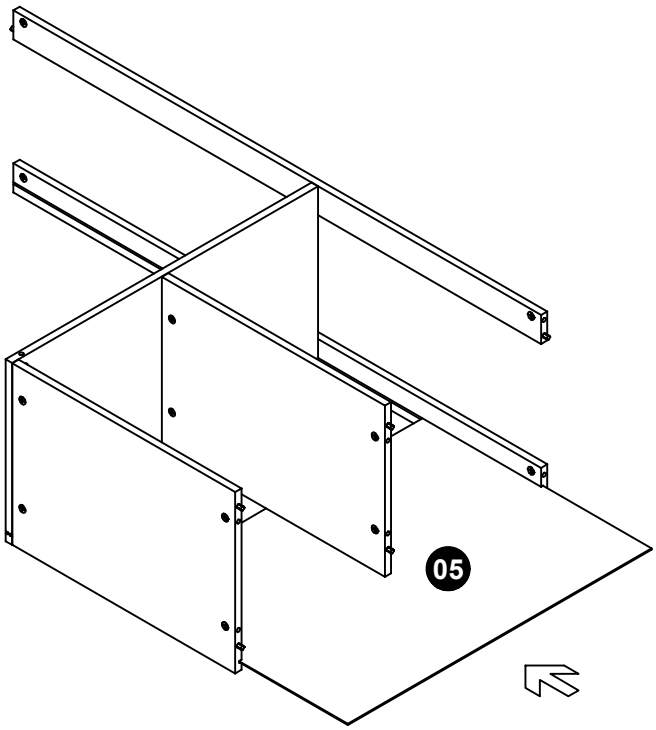


30

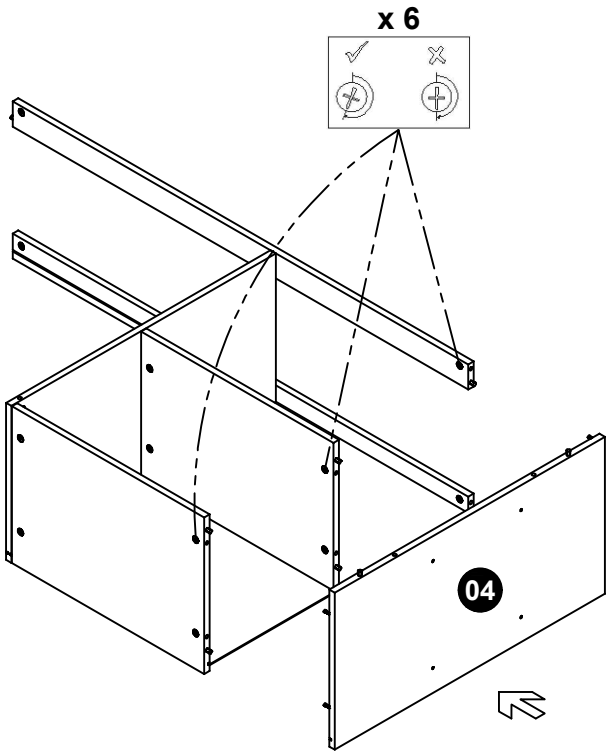

Guide To Assembly
Model : Kansas

31




B x 4

WHEN FITTING CAM STUD


ENSURE THE CAM STUD IS FULLY TIGHTEN IN




CORRECT WRONG

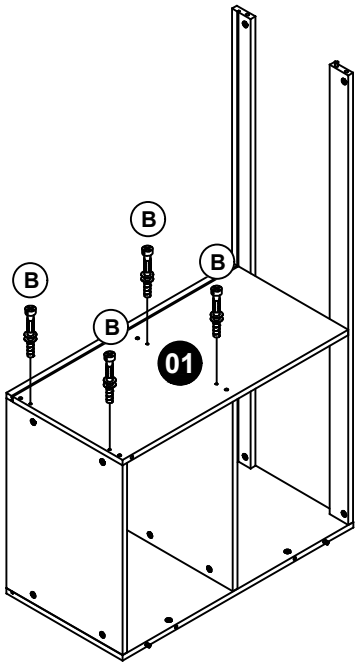


32

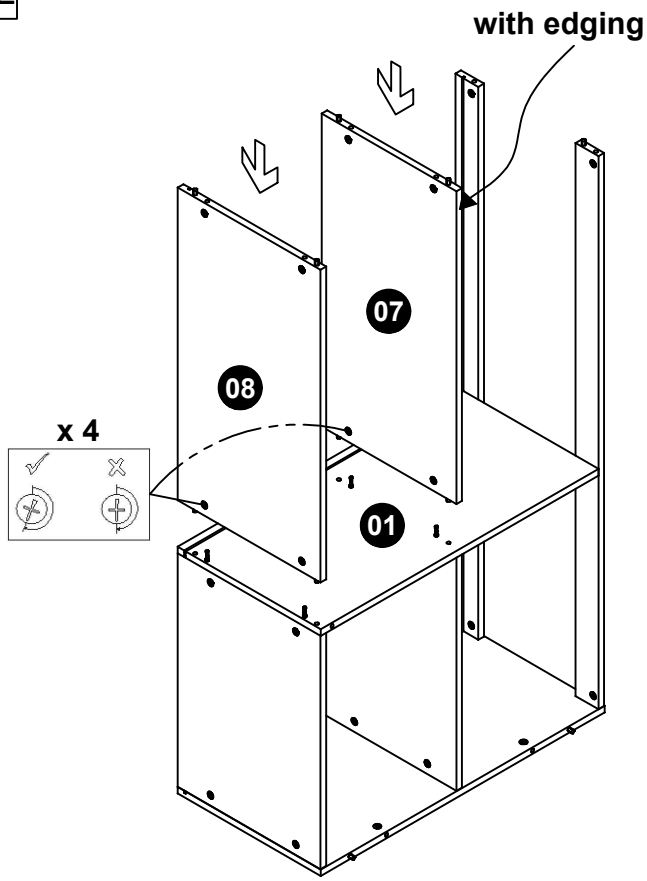


33

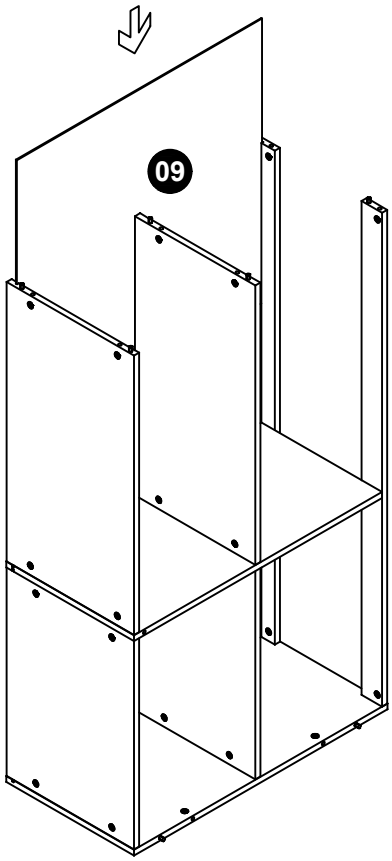



34

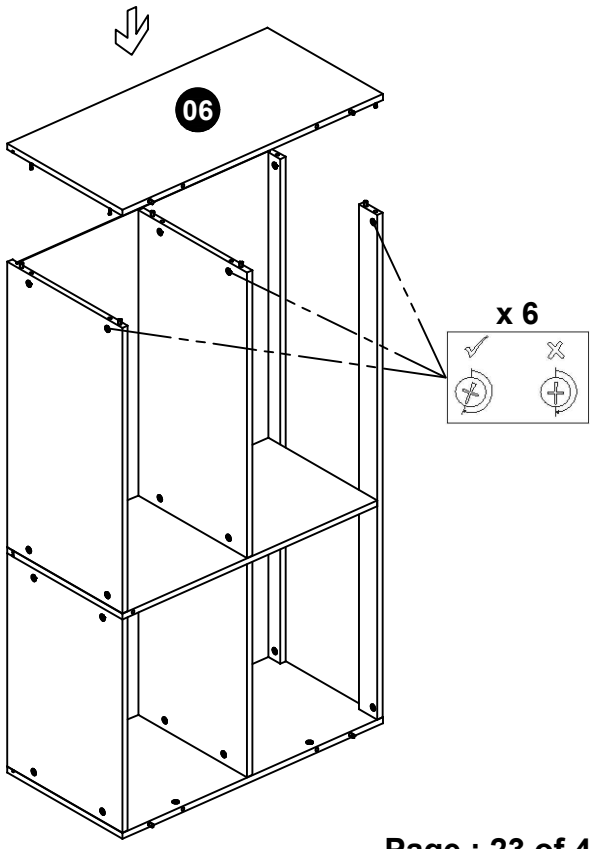


Guide To Assembly
Model : Kansas

35  A4 x 6

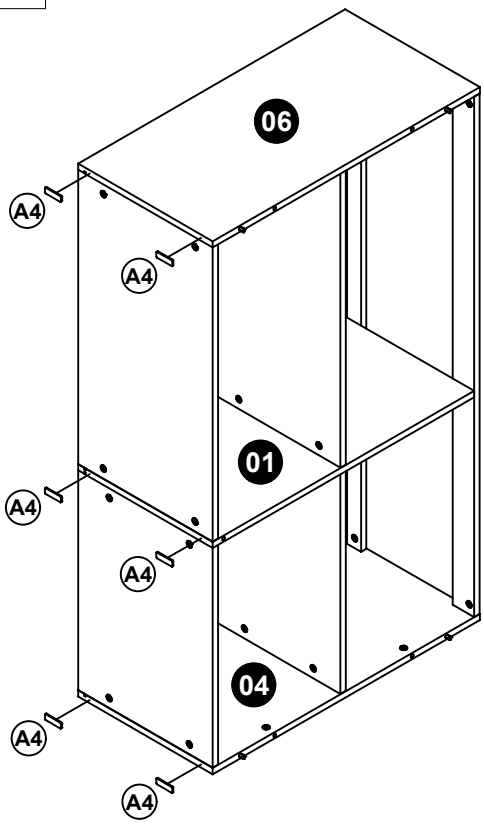


36  B x 4


WHEN FITTING CAM STUD
ENSURE THE CAM STUD IS FULLY TIGHTEN IN



CORRECT WRONG

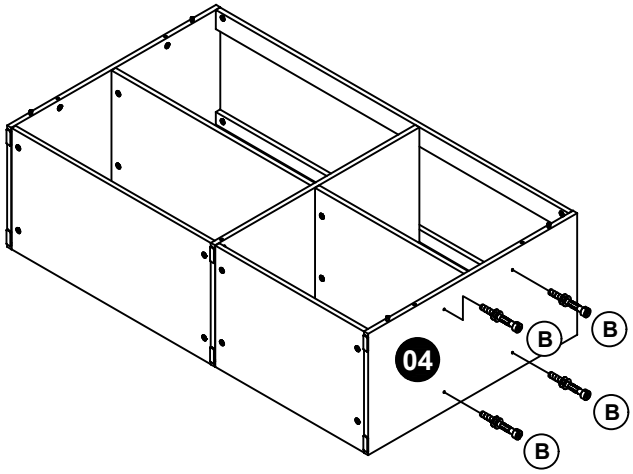



37

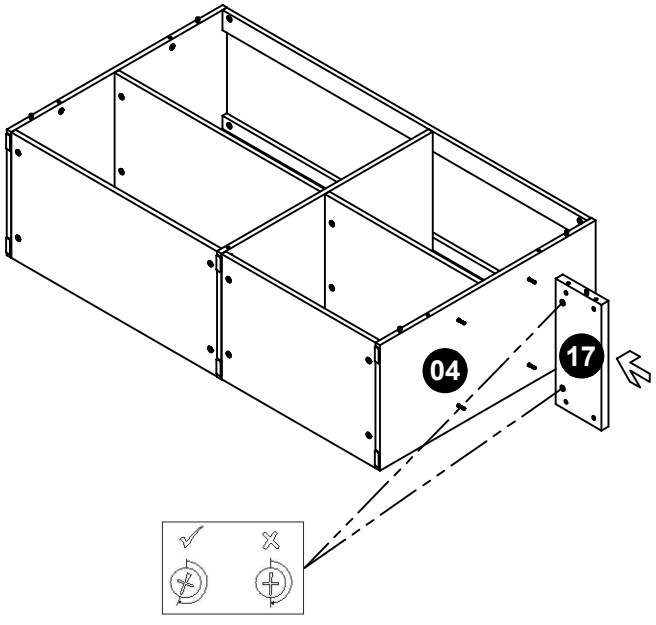

x 2

38

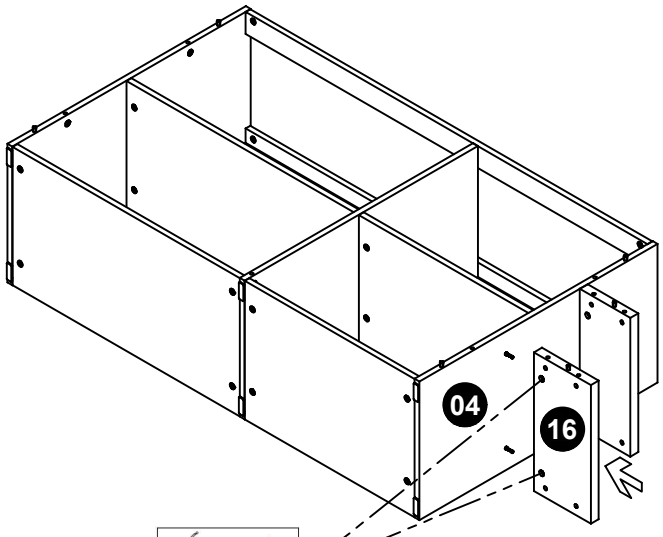





x 2

Guide To Assembly
Model : Kansas

39

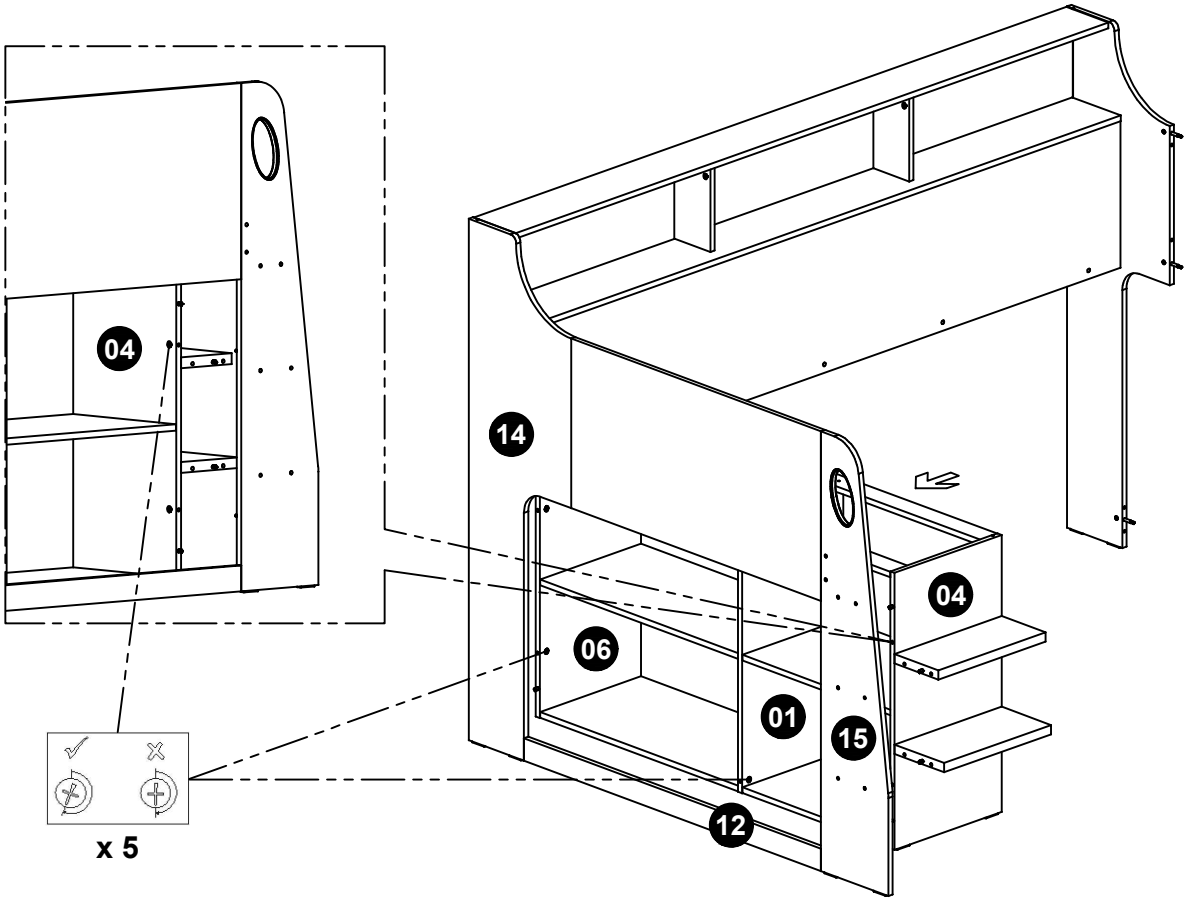

40

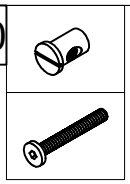


T x 6

U x 6


Guide To Assembly
Model : Kansas

41 A5 x 2

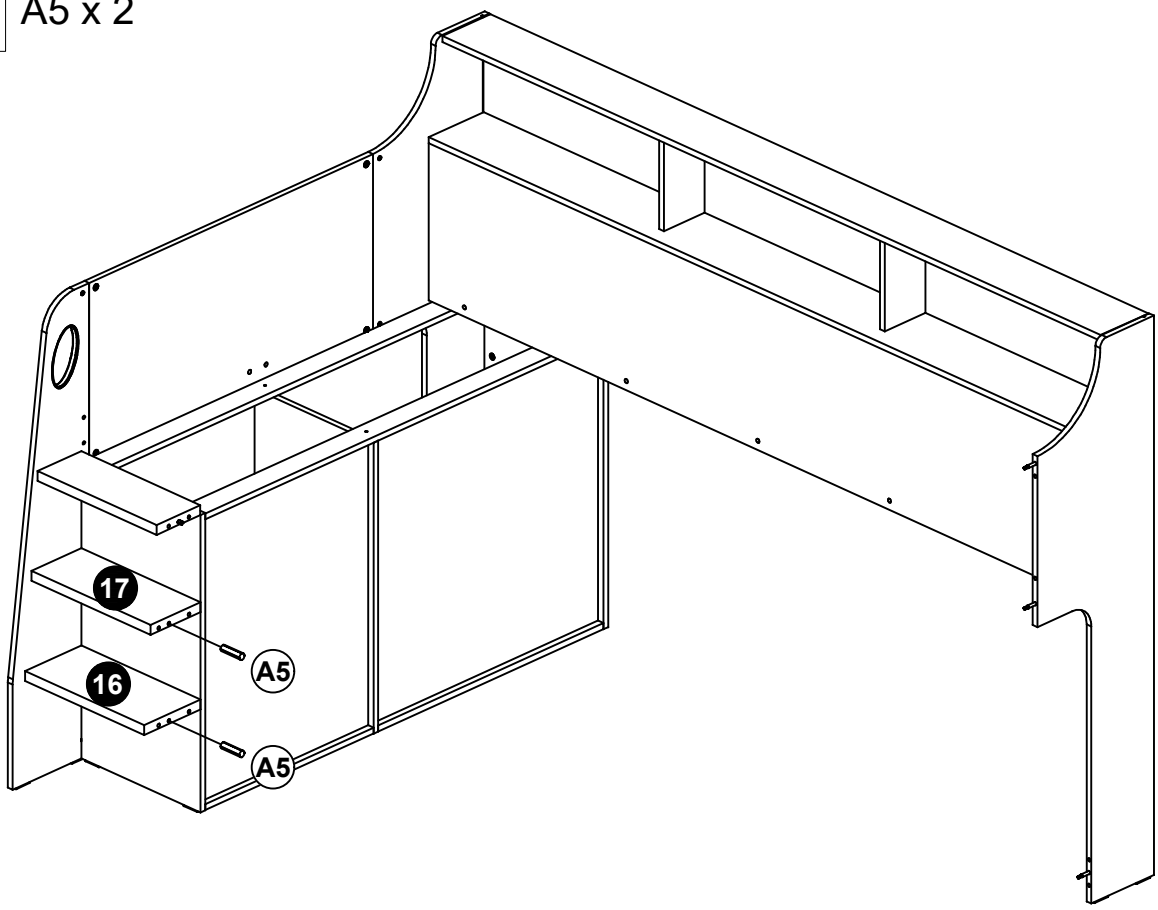


42 T x 6

U x 6

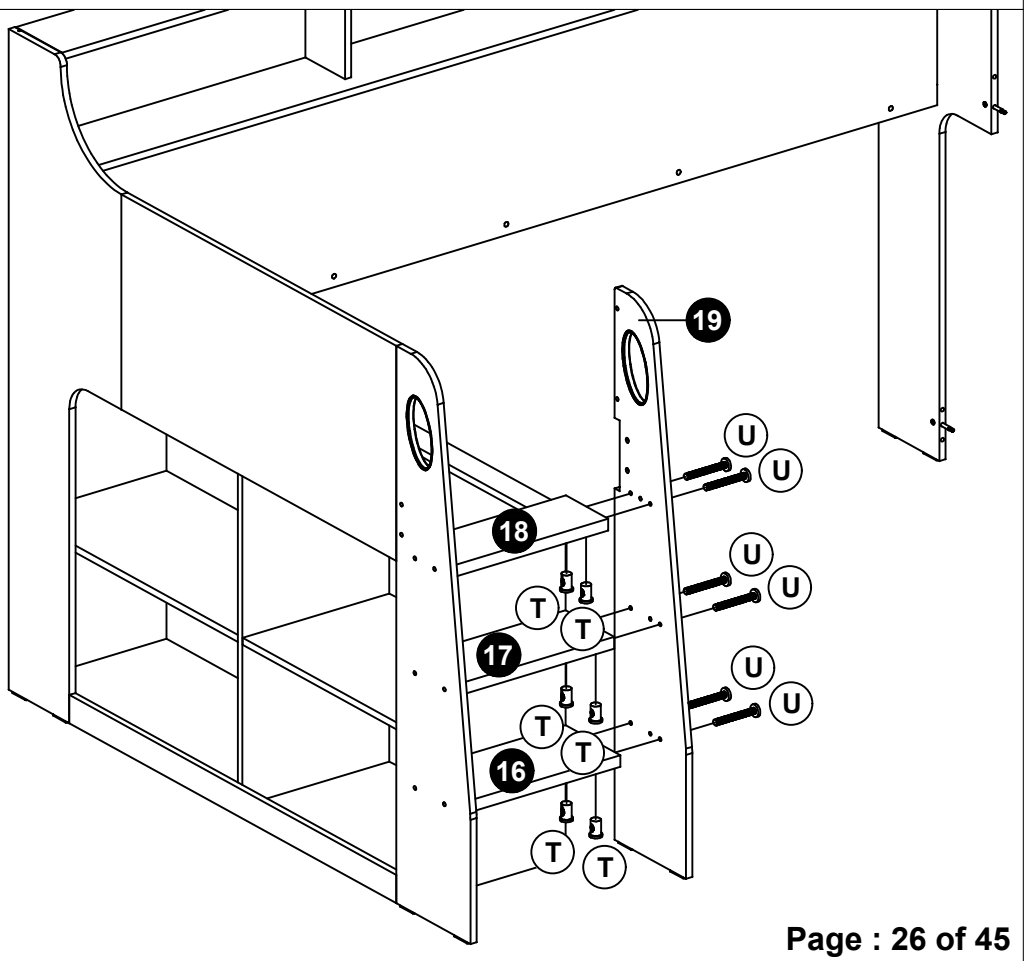


Guide To Assembly
Model : Kansas

43 W x 2

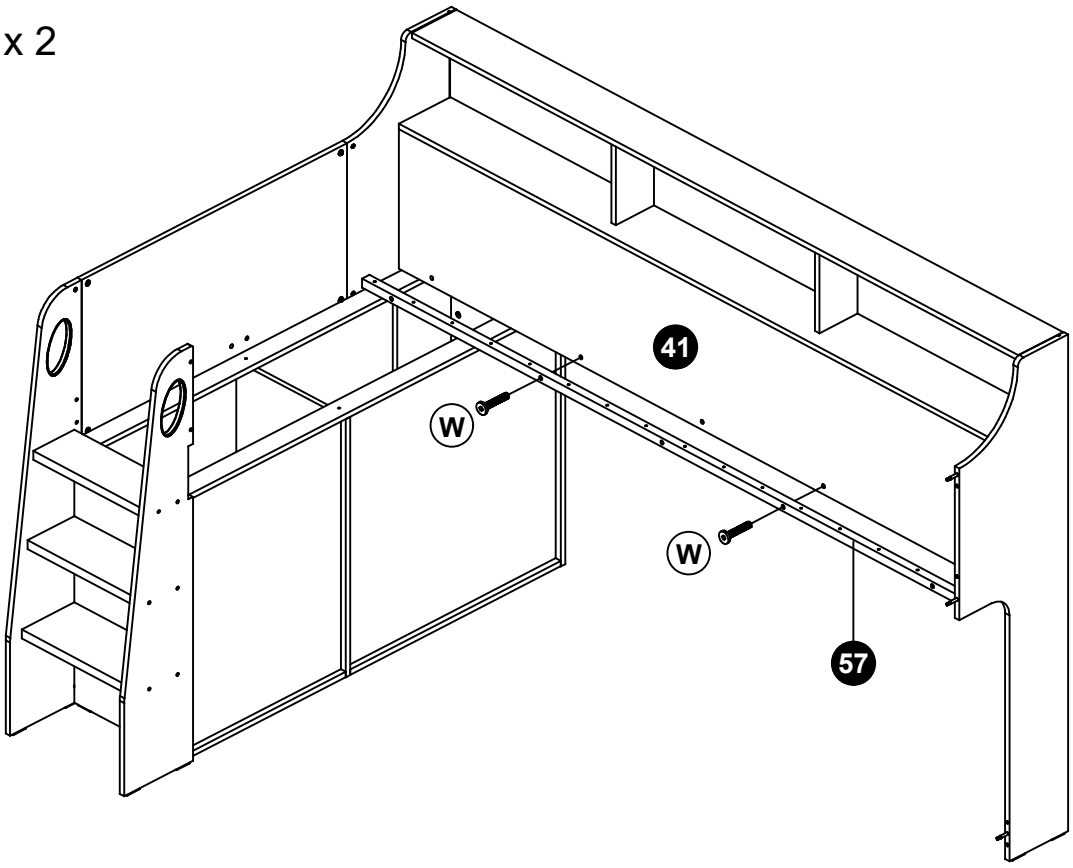


44 W x 3

Z x 3

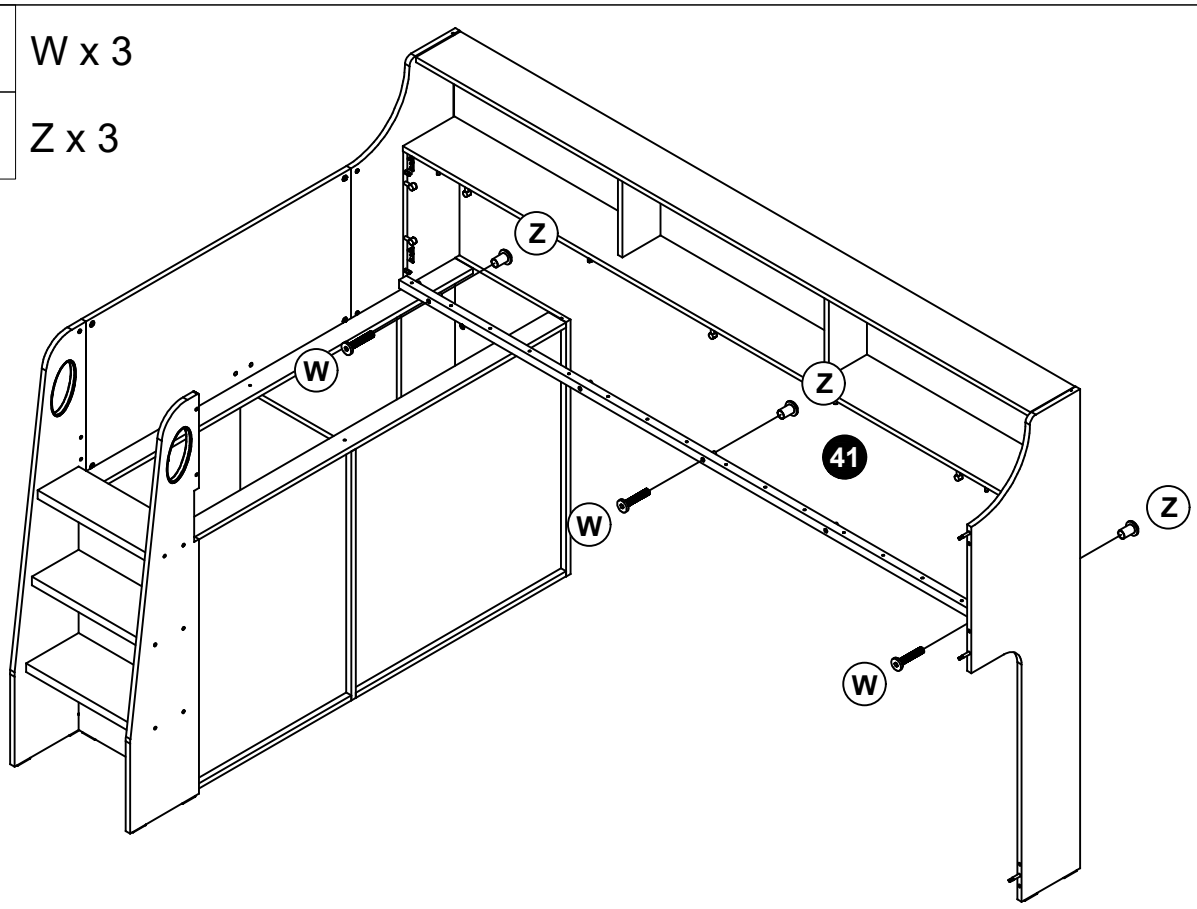


Guide To Assembly
Model : Kansas

45

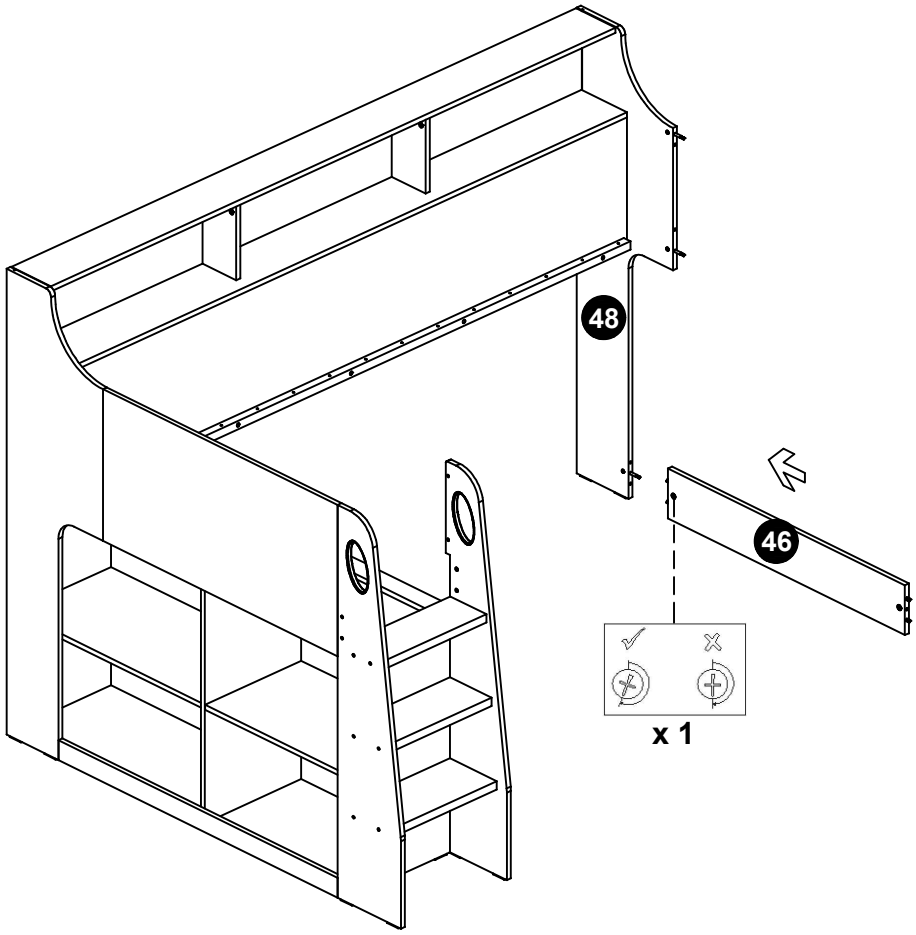


46

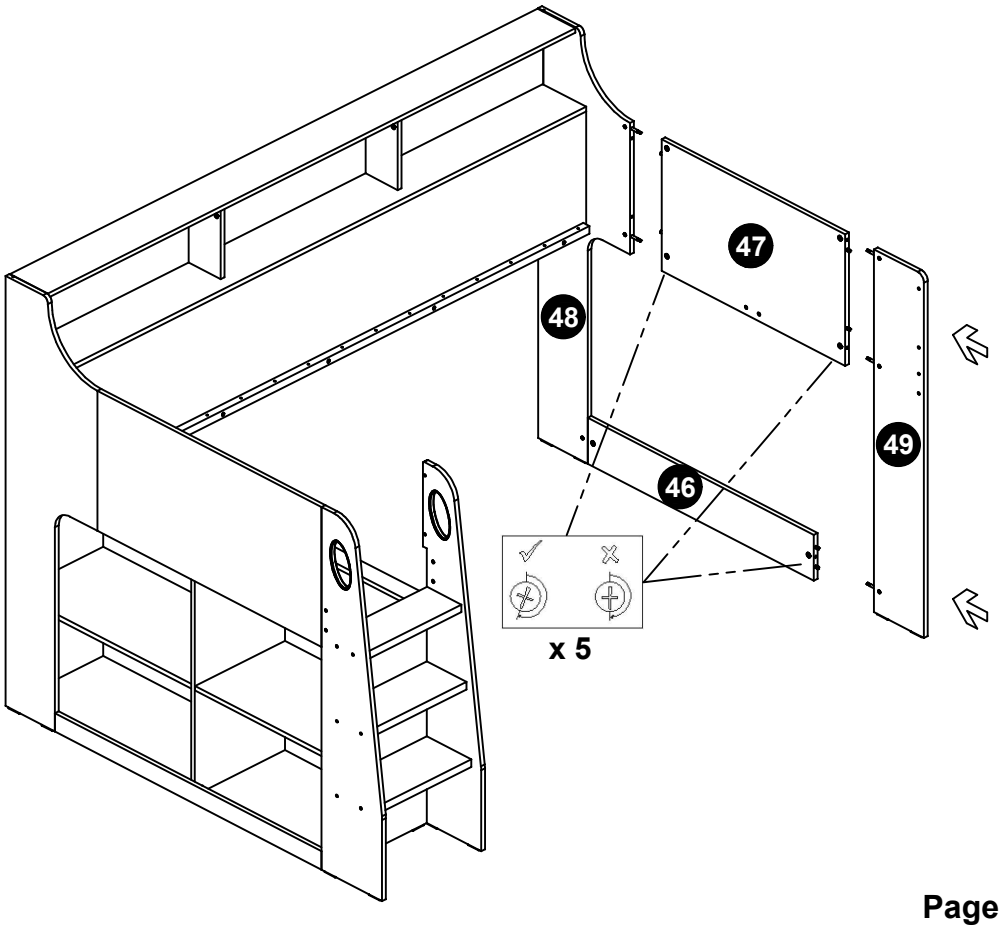

Guide To Assembly
Model : Kansas


47

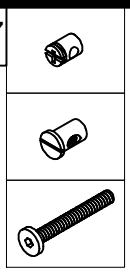


S x 4

T x 4

U x 8

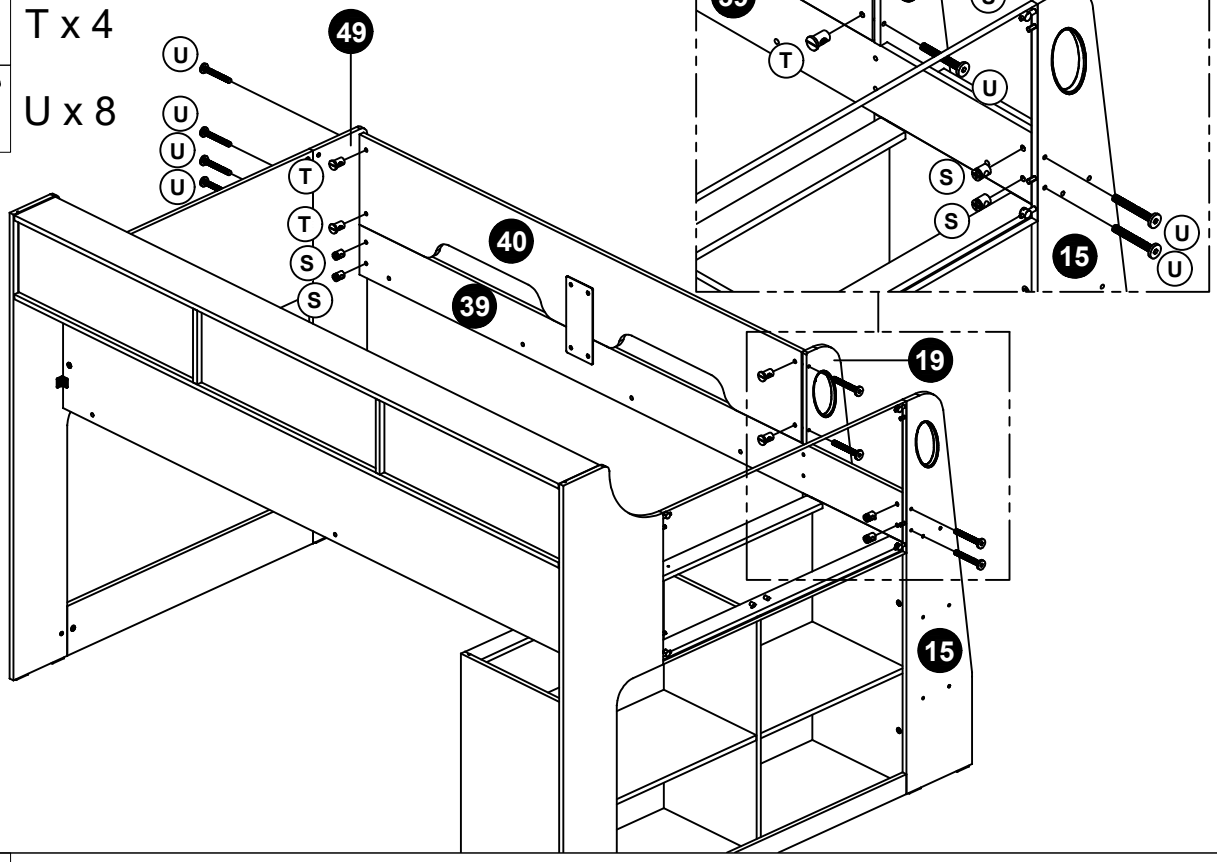

48

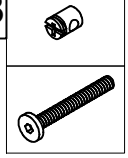



S x 2


U x 2


Guide To Assembly
Model : Kansas


49  W x 2

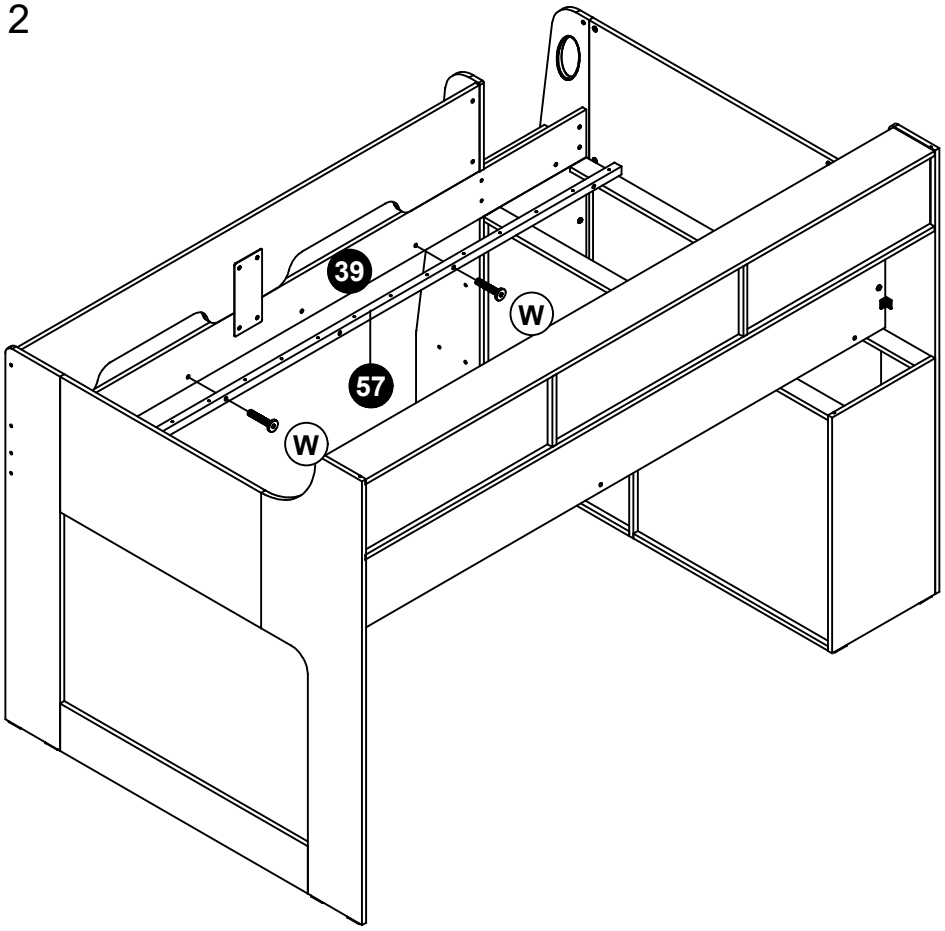

50  W x 2

 X x 1


 Z x 3

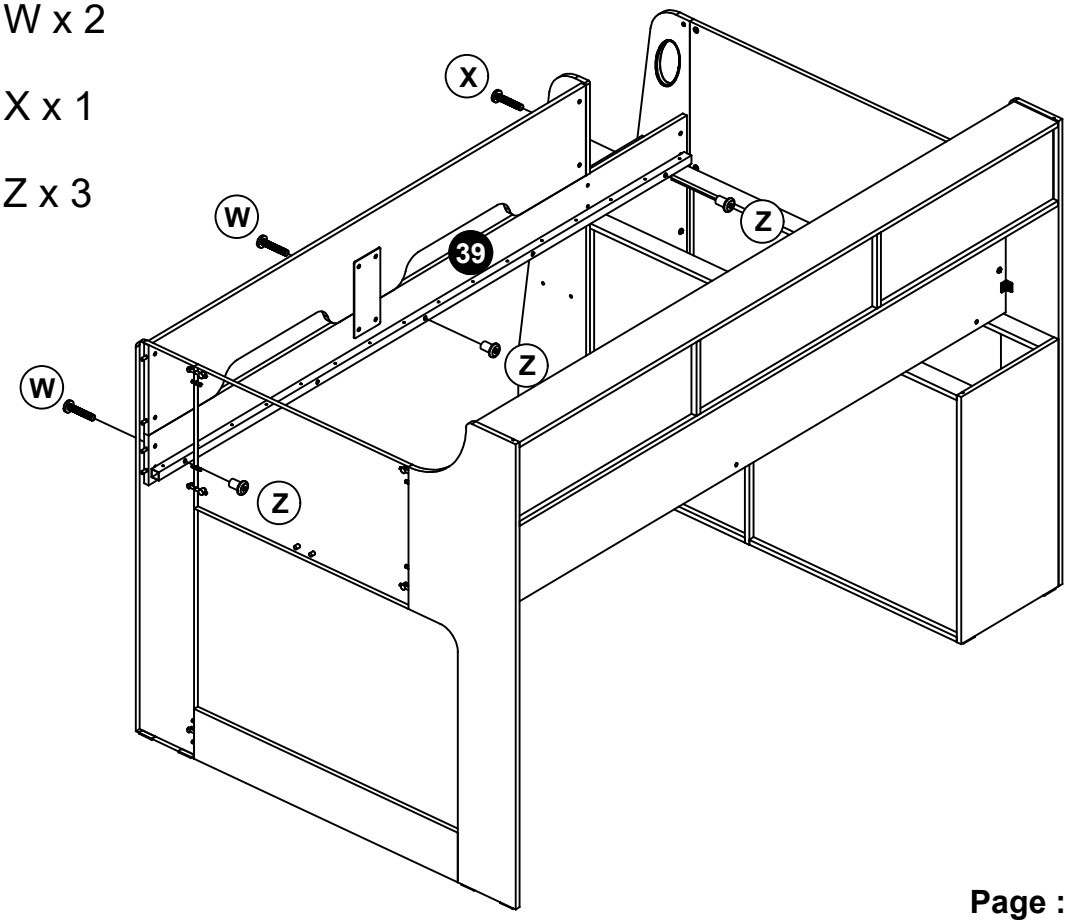


Guide To Assembly
Model : Kansas

51  Y x 4


52  X x 32

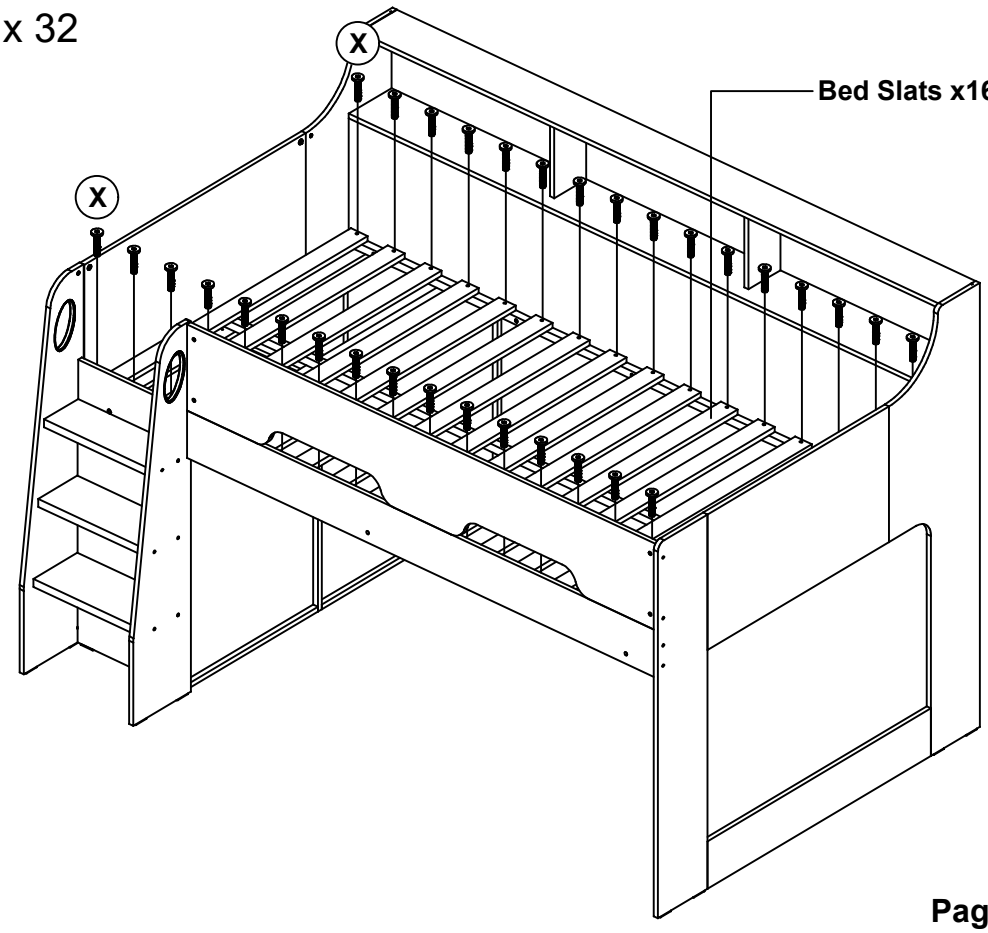

53 A6 x 8

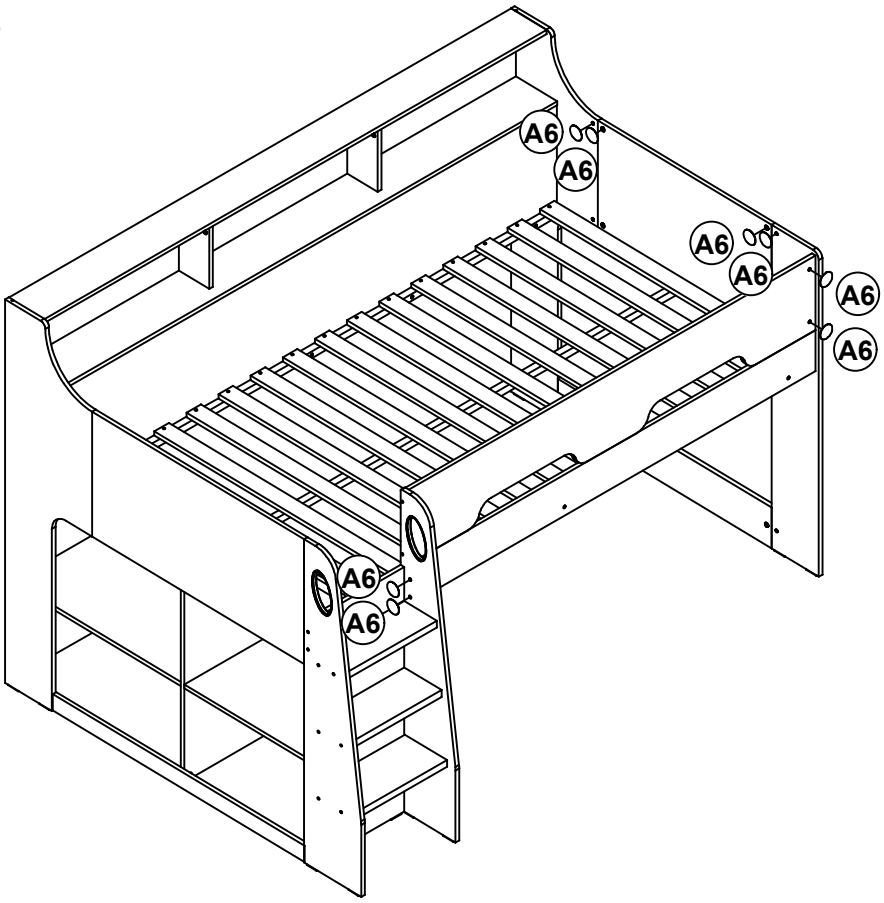

54 A6 x 6

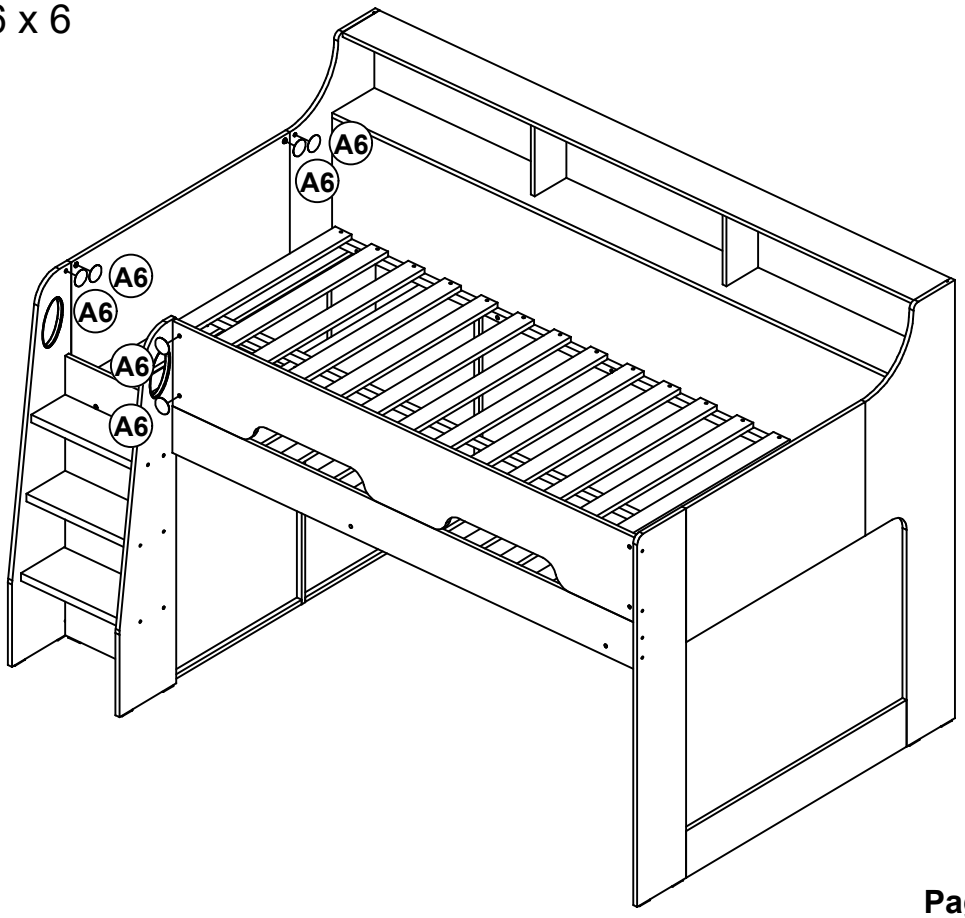


Guide To Assembly
Model : Kansas

55





J x 9



K x 3

To Assembly the Drawer Slide, Please Follow Step as Below

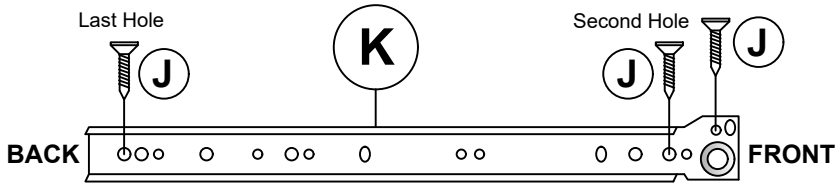


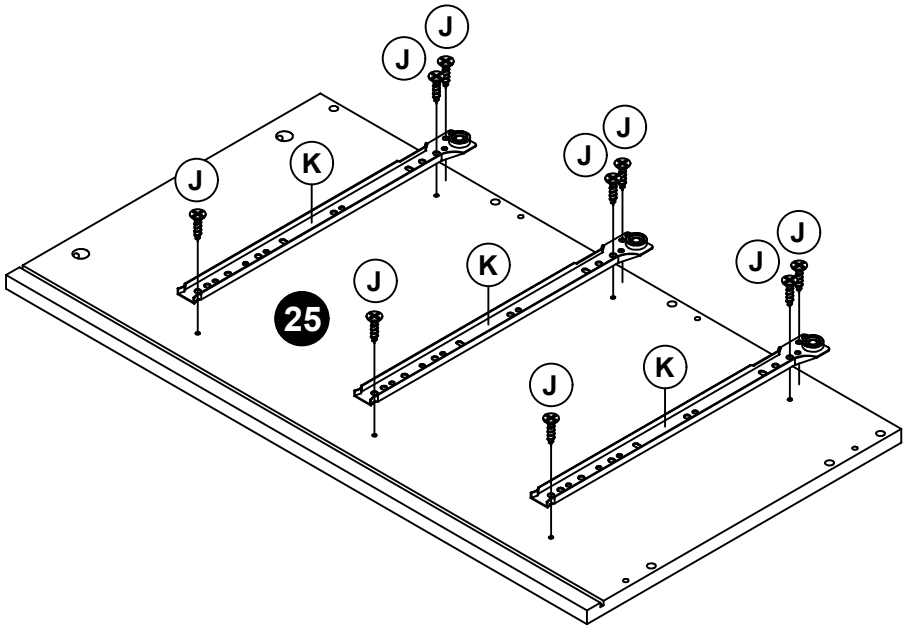

56





J x 9



K x 3


To Assembly the Drawer Slide, Please Follow Step as Below

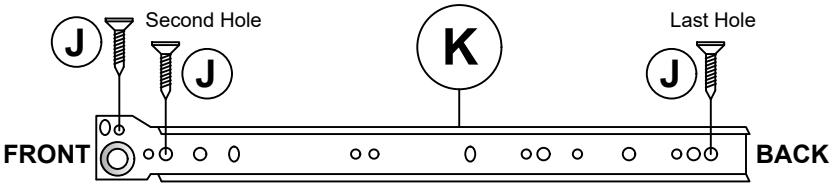

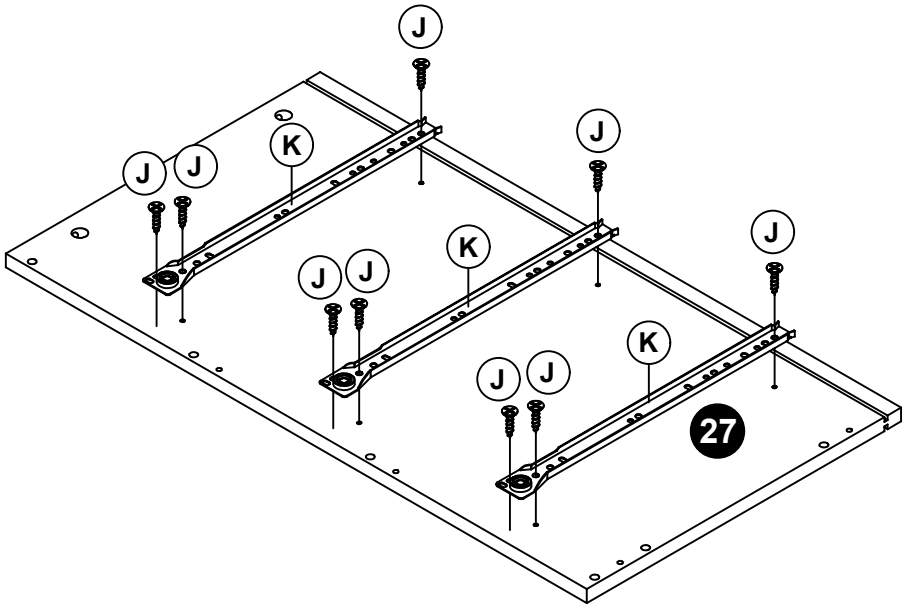

Guide To Assembly
Model : Kansas

57

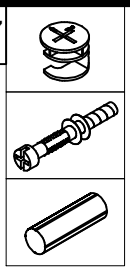


A x 10

B x 6

D x 14

WHEN FITTING CAM STUD


ENSURE THE CAM STUD IS FULLY TIGHTEN IN




CORRECT WRONG

WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

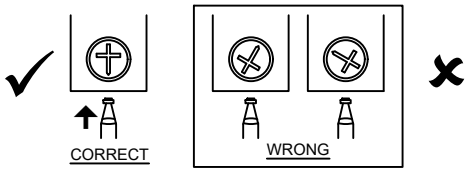


CORRECT WRONG

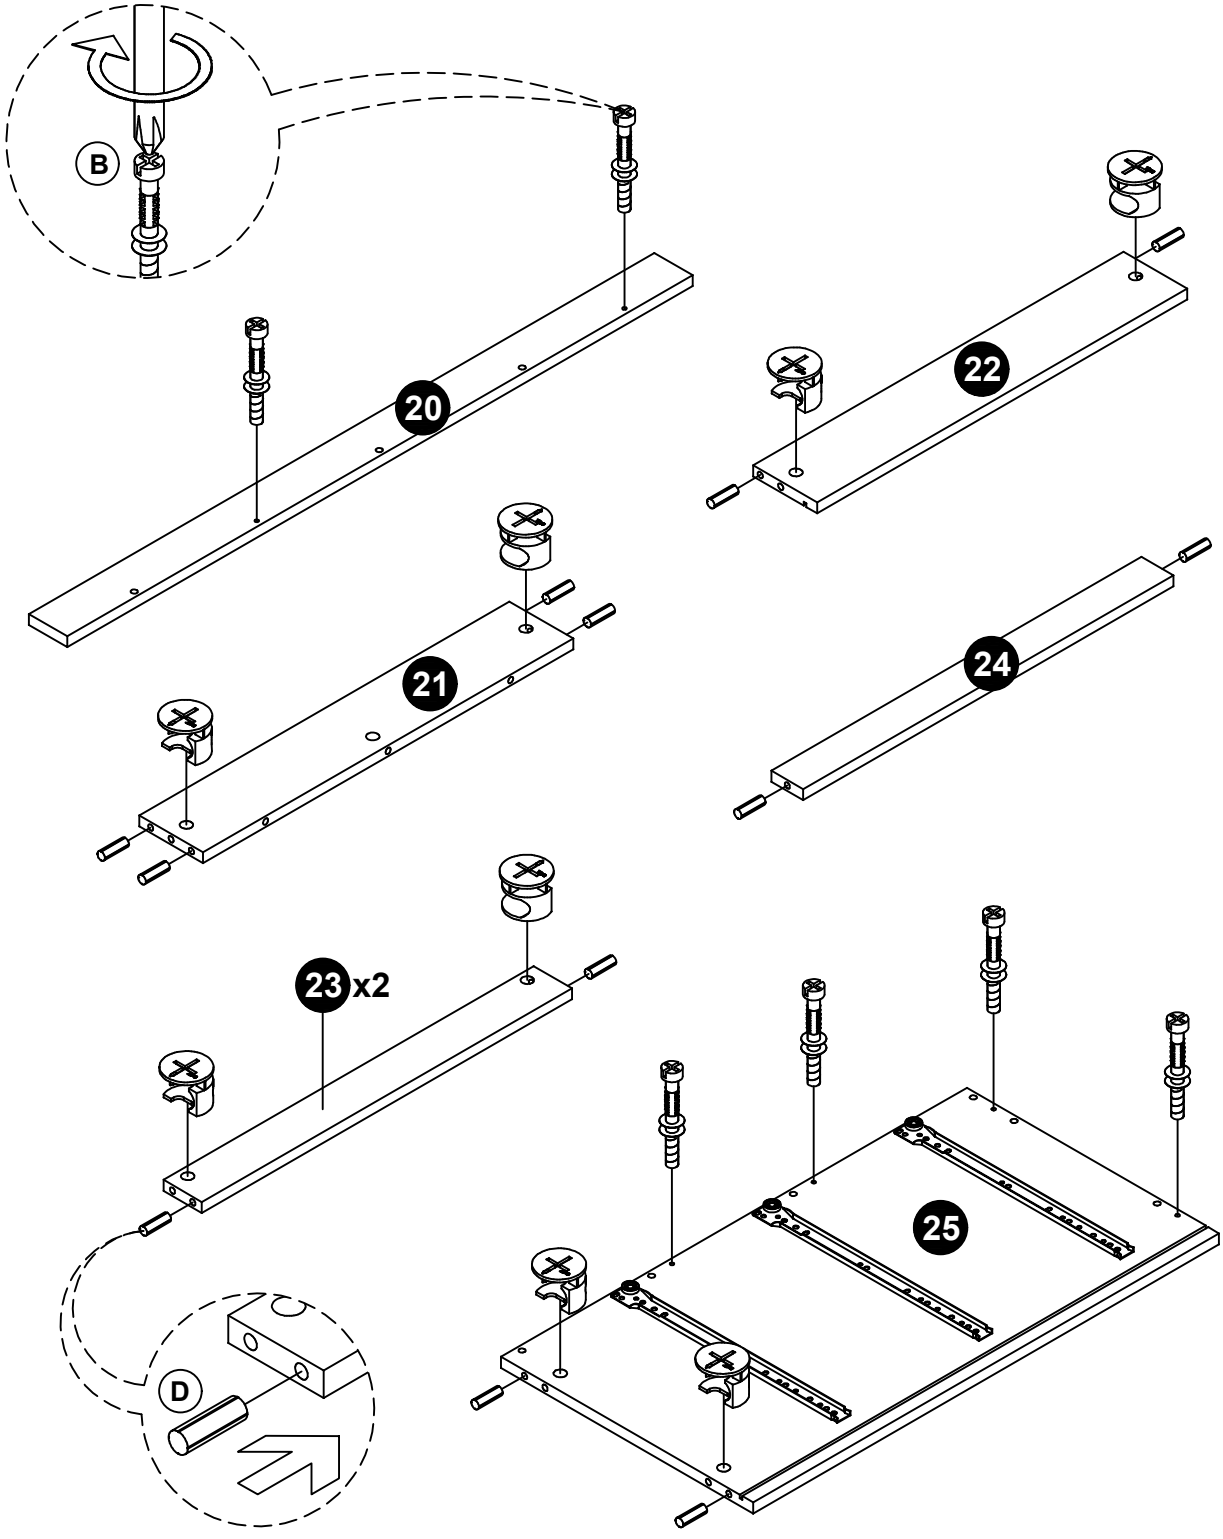


Guide To Assembly
Model : Kansas

58



A x 8


B x 12


D x 10



J x 4


L x 2


V x 2


WHEN FITTING CAM STUD

ENSURE THE CAM STUD IS FULLY TIGHTEN IN




WHEN FITTING CAMS

ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING BOLT
TURN CLOCKWISE UNTIL SECURE

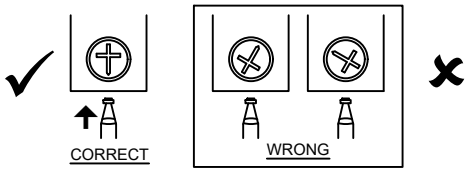


Guide To Assembly
Model : Kansas


59

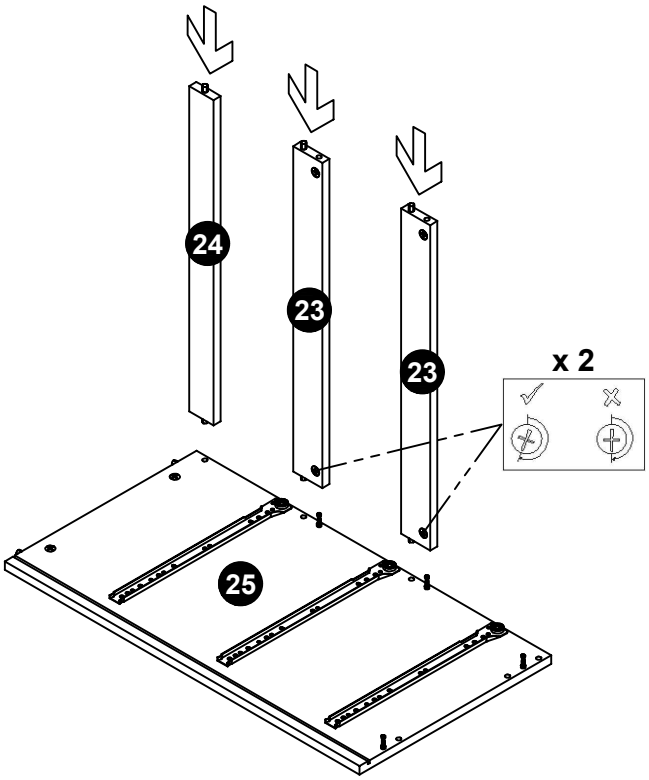


60

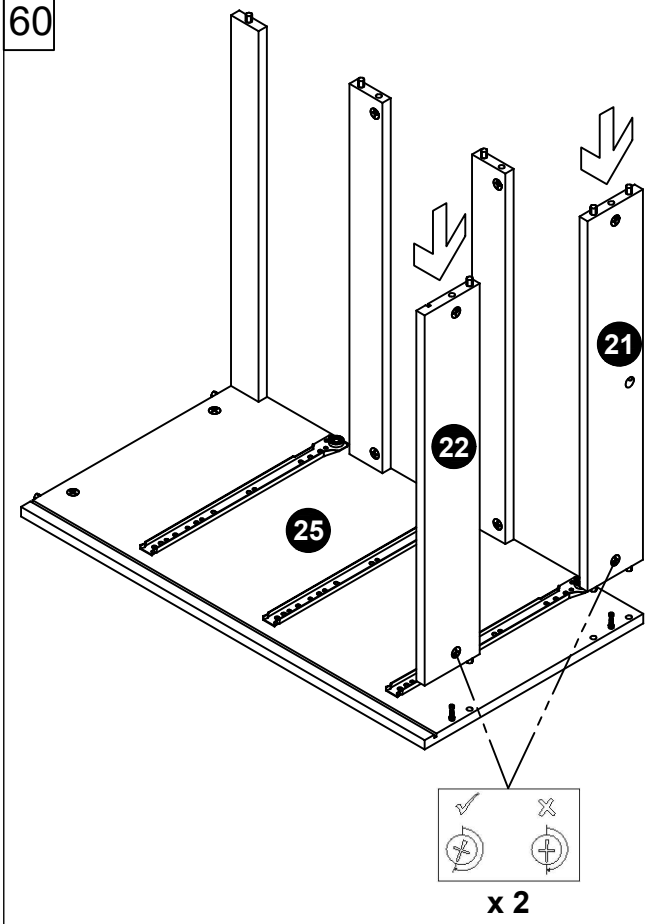



61

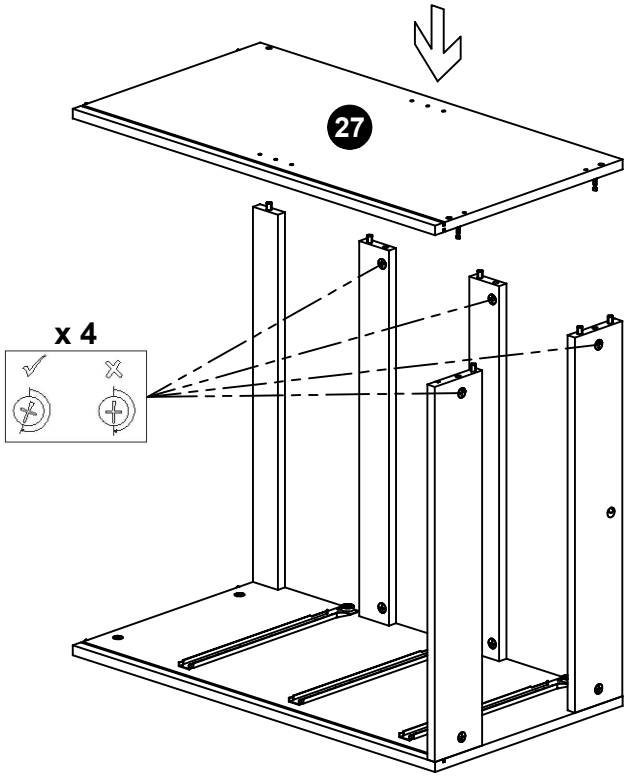


62


B x 2



V x 2

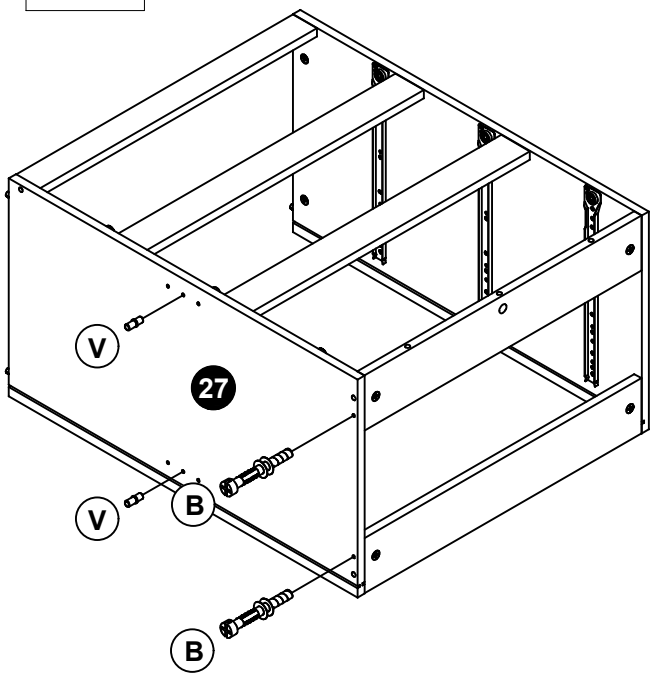

63

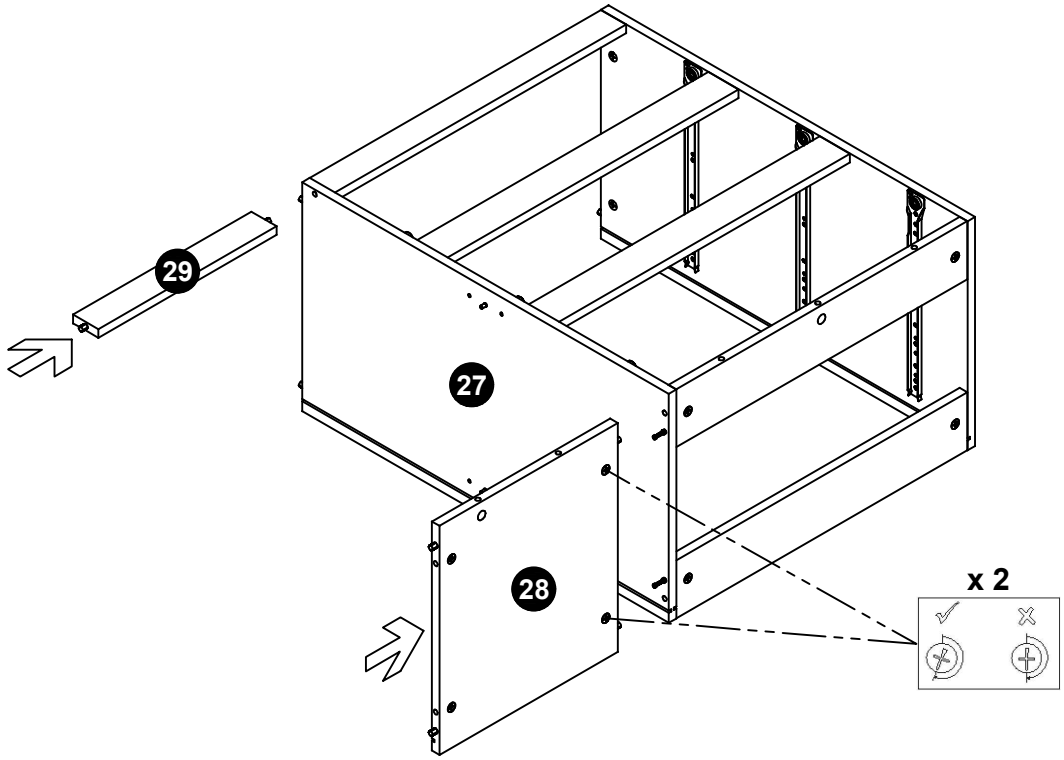

64

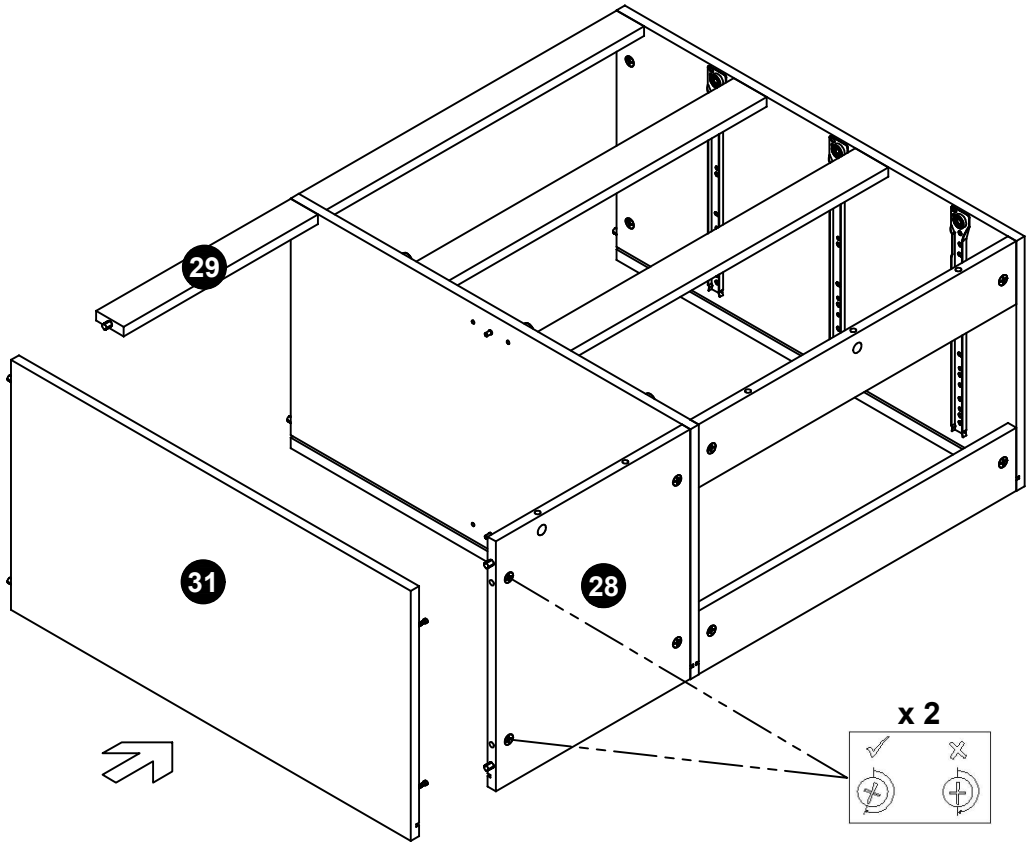


Guide To Assembly
Model : Kansas


65




A x 2



D x 3

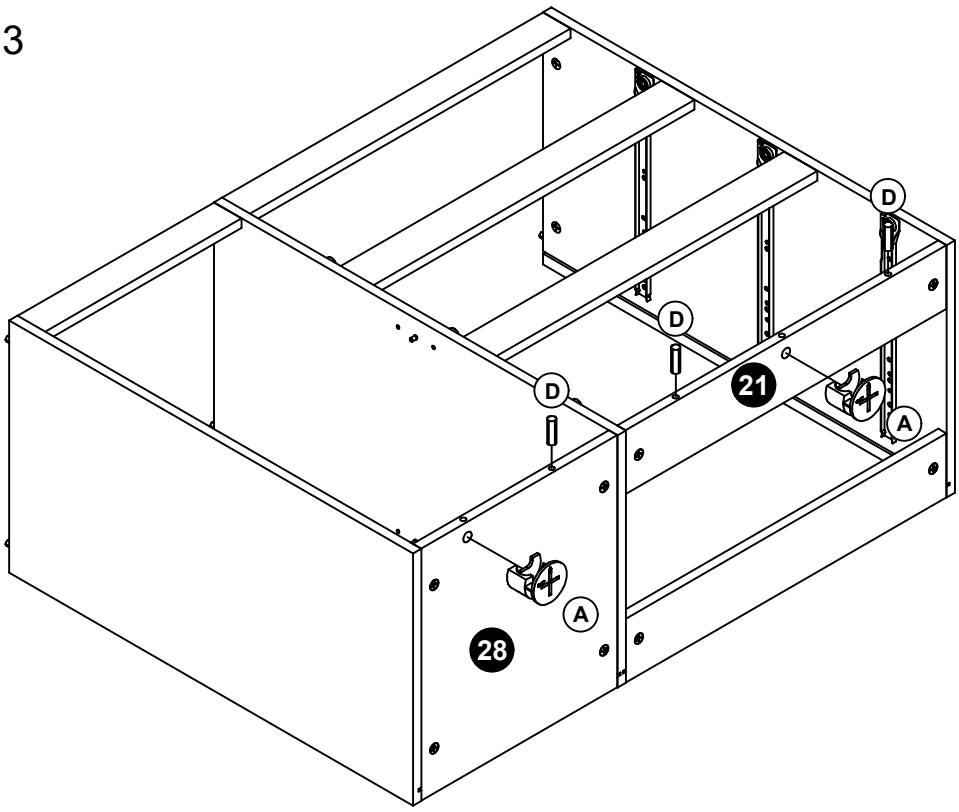


66

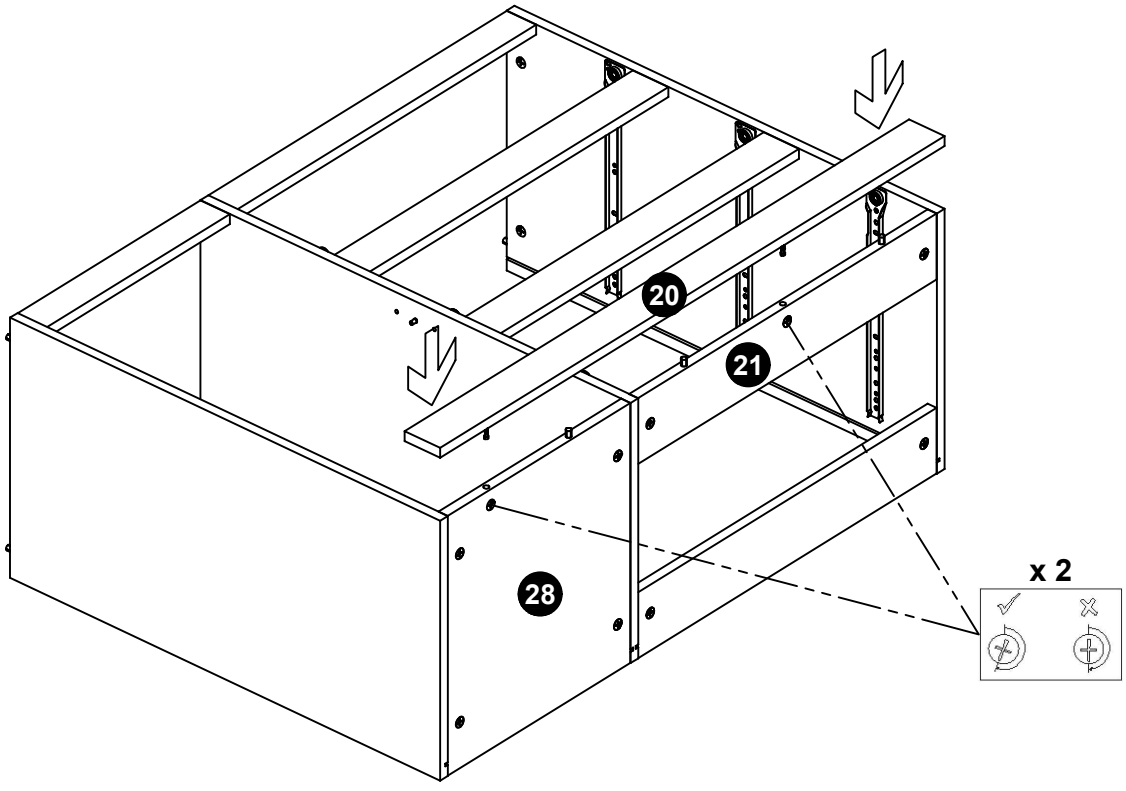


Guide To Assembly
Model : Kansas


67



A4 x 6

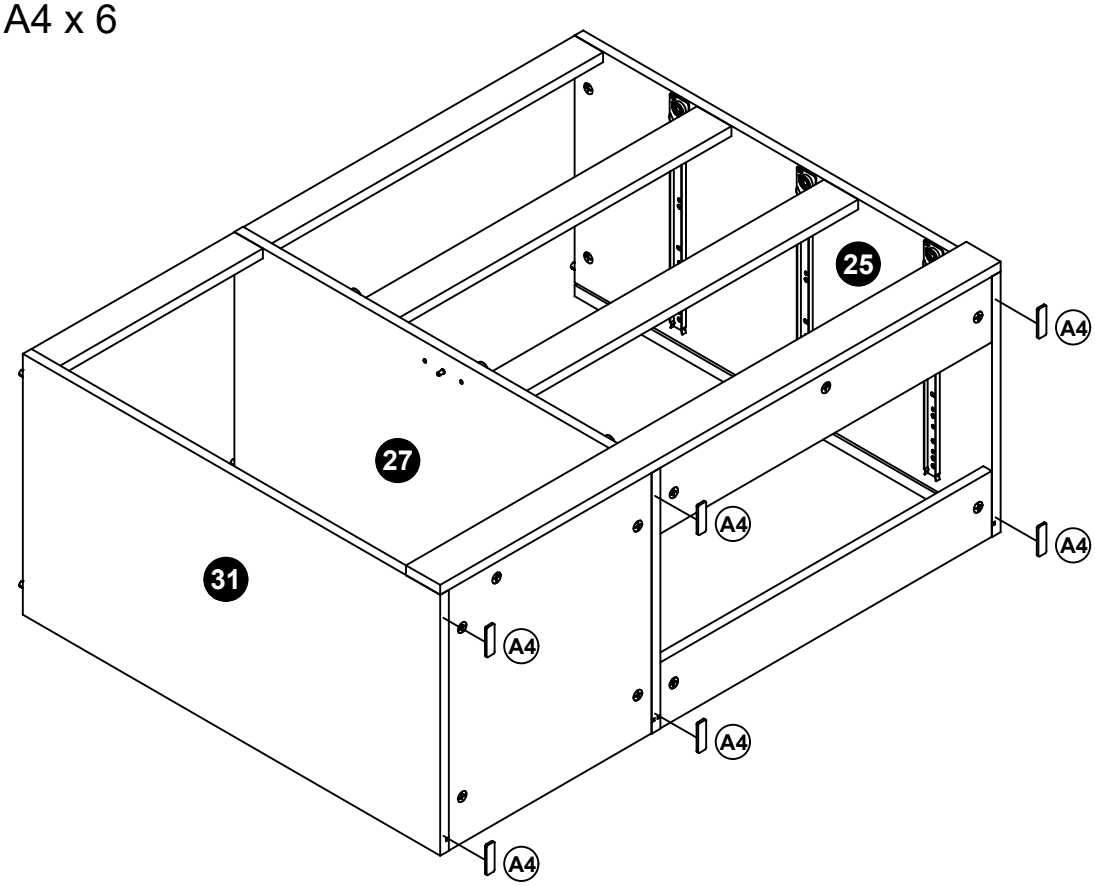


68

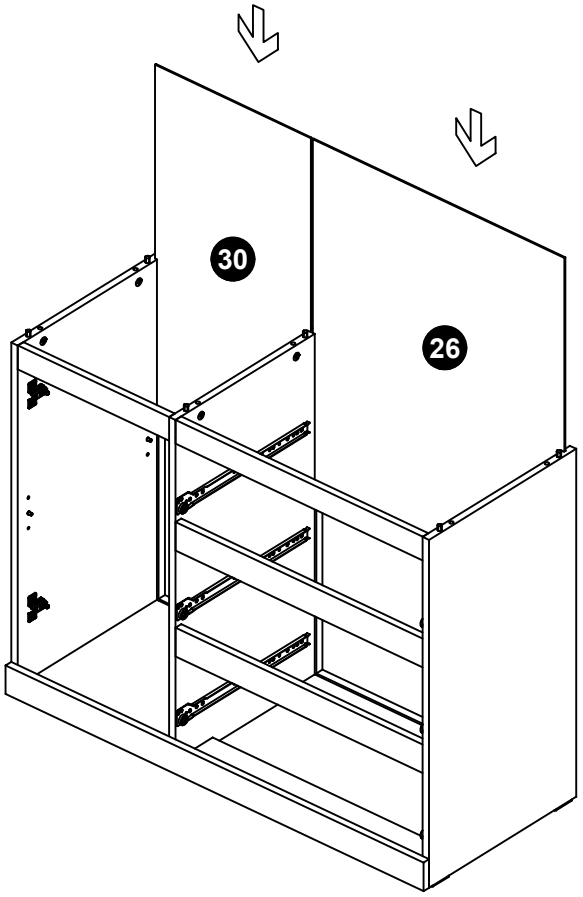



Guide To Assembly
Model : Kansas


69

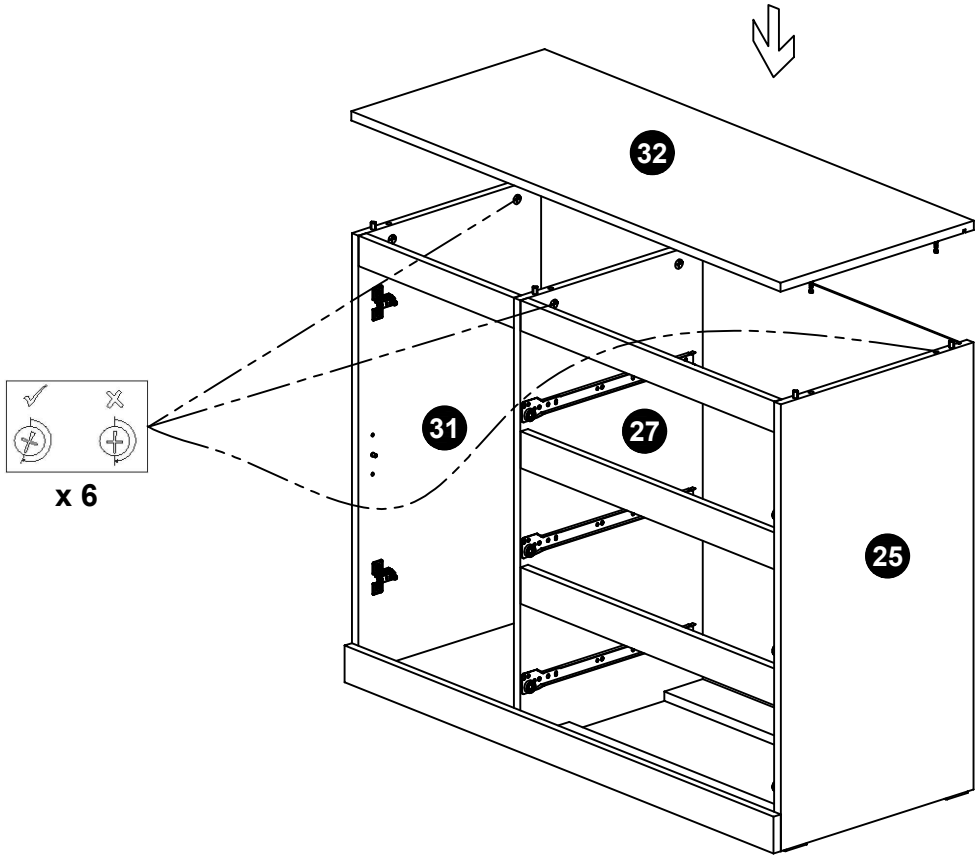

70

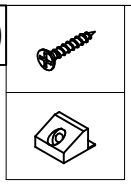

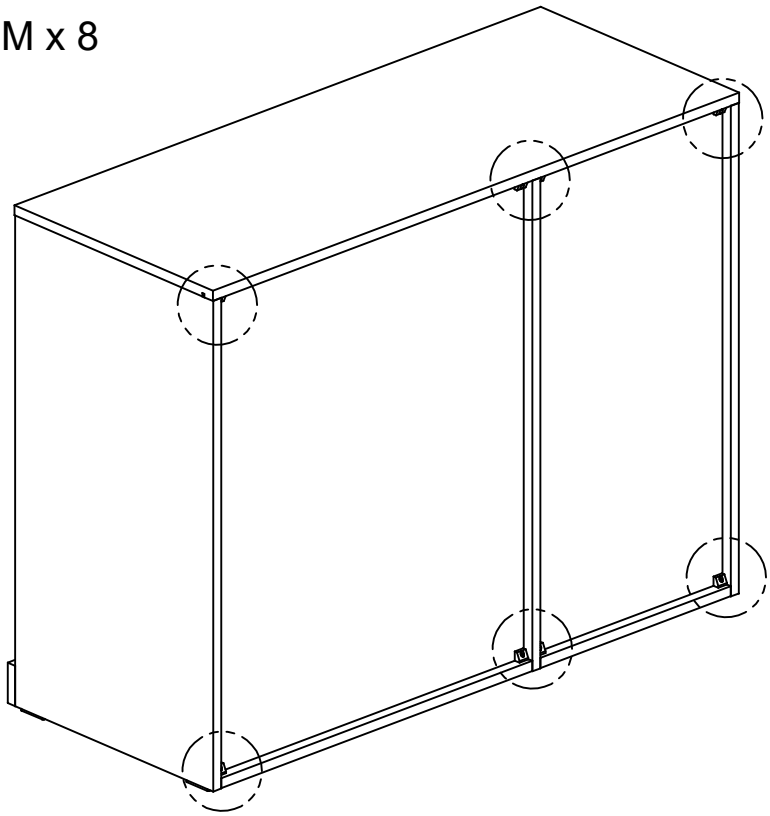

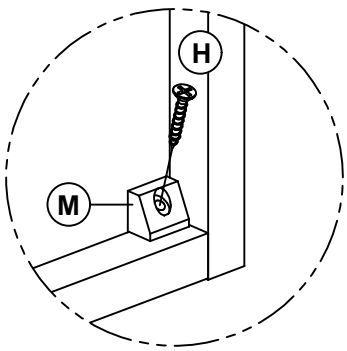


Guide To Assembly
Model : Kansas


71




J x 4





L x 2

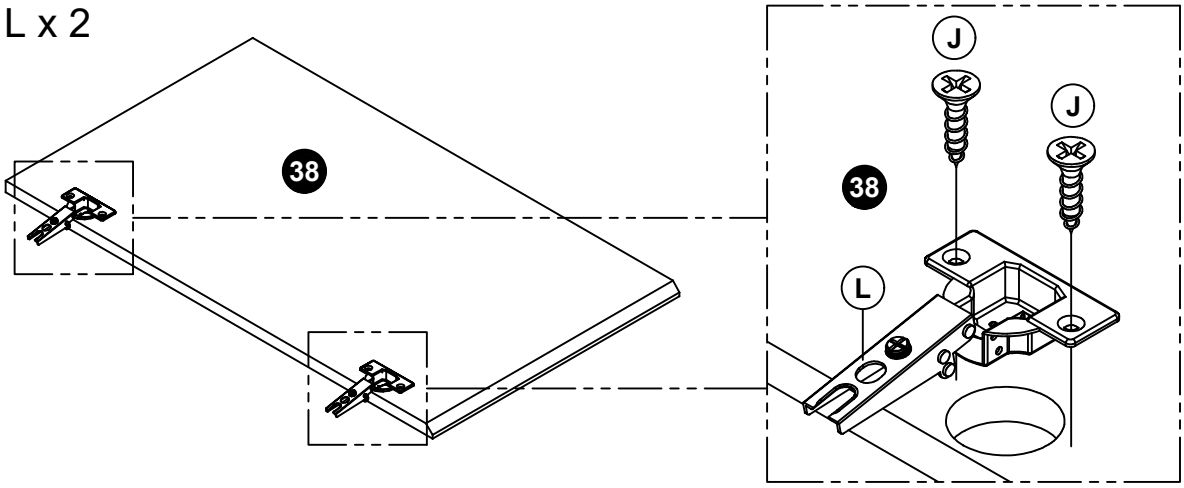


72

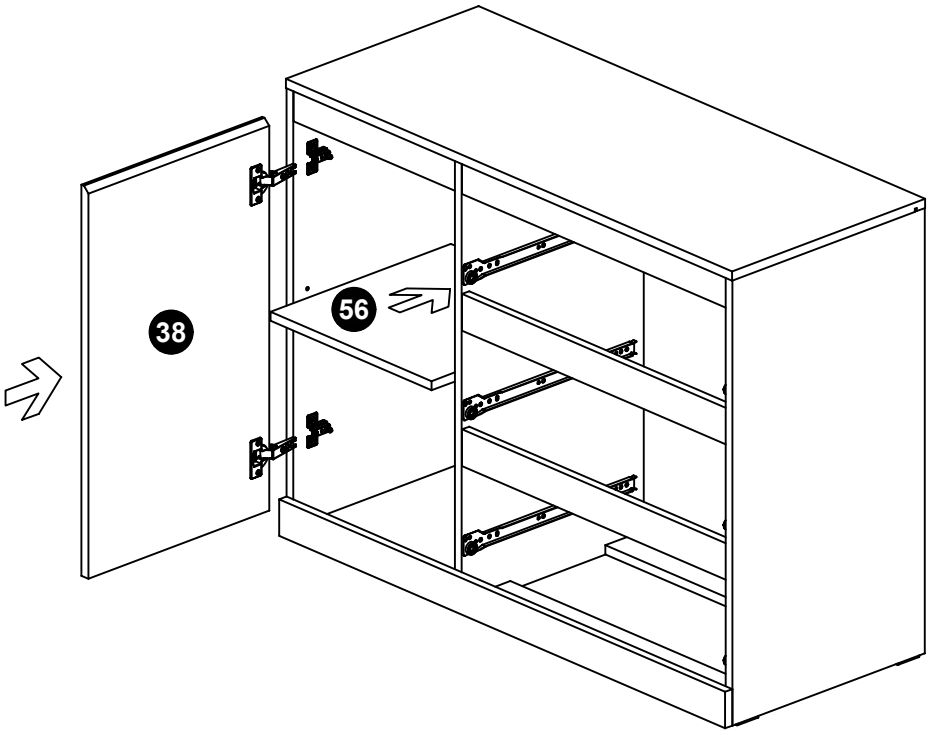


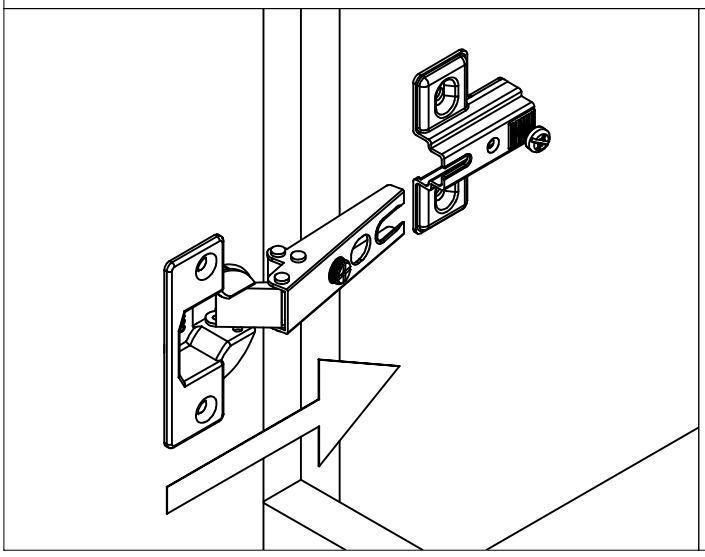

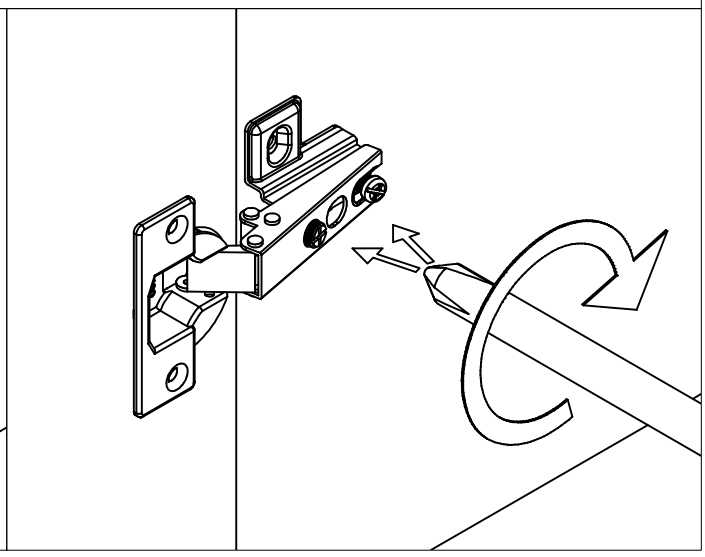



Adjusting Possibilities

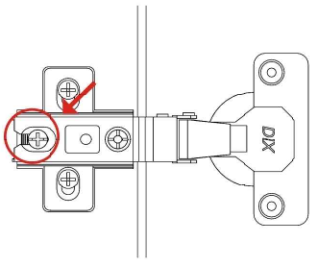

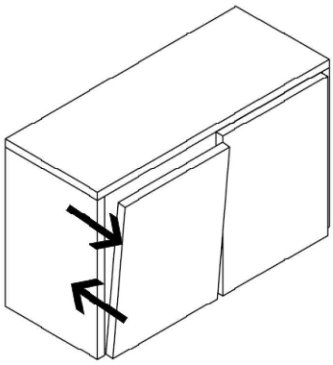



Depth Adjustment
after loosening the hinge arm mounting screw

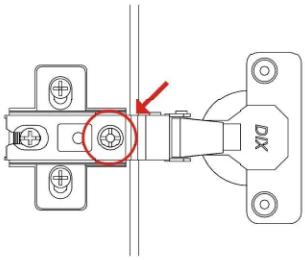

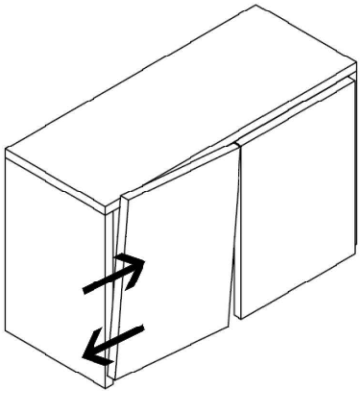

Lateral Adjustment
by adjusting screw

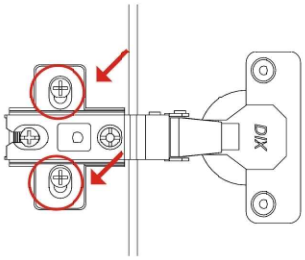


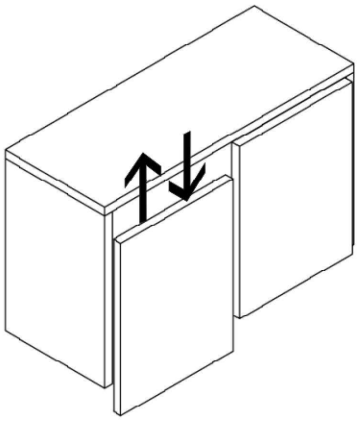

Vertical Adjustment
via mounting plate (via slots or, if in two pieces, via screw)

Guide To Assembly
Model : Kansas


73



A x 6




B x 6




D x 12

74




G x 12

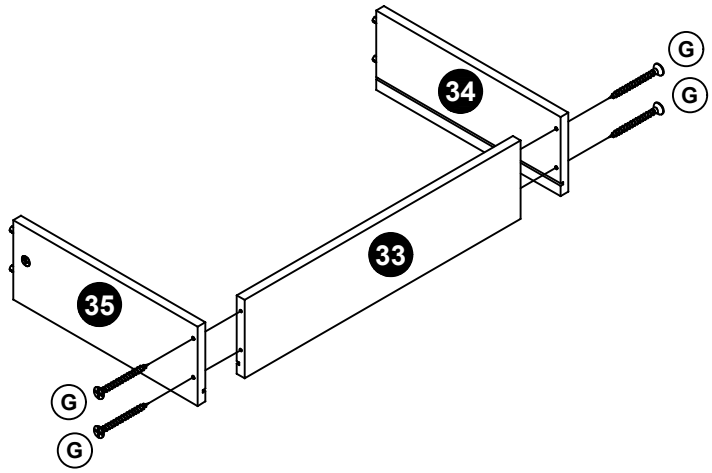


Do This Step 3 Times

75

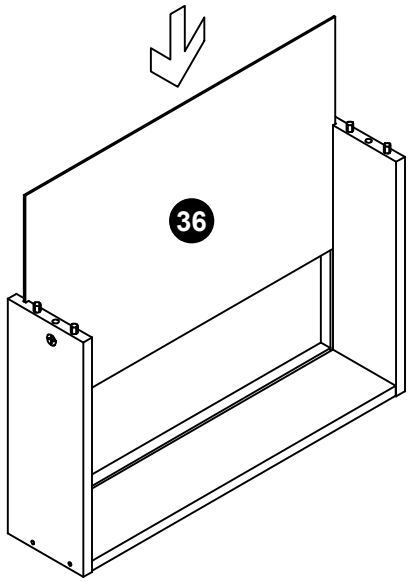

Do This Step 3 Times

76

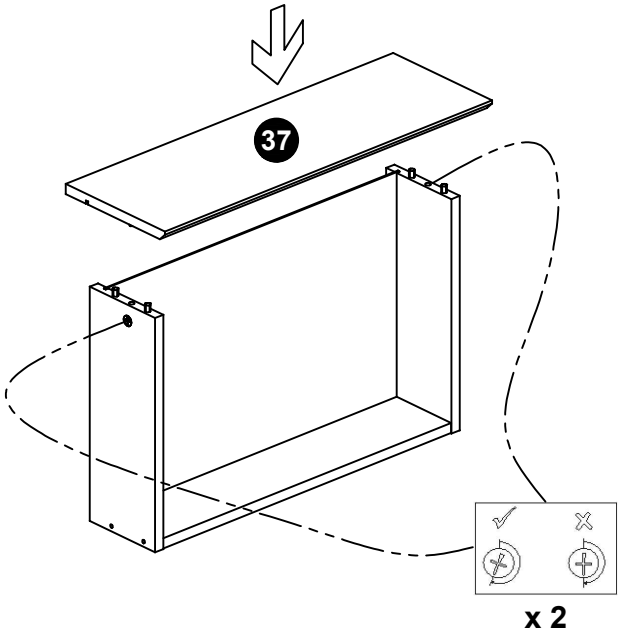

x 2


Do This Step 3 Times

Guide To Assembly
Model : Kansas


77



H x 6




M x 6

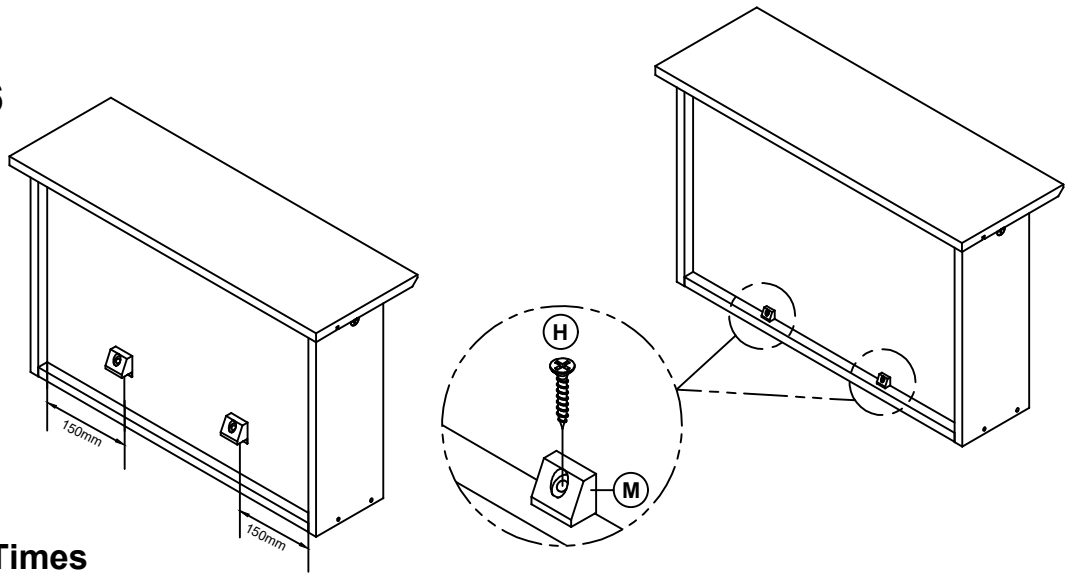


Do This Step 3 Times


78



H x 6



M x 6

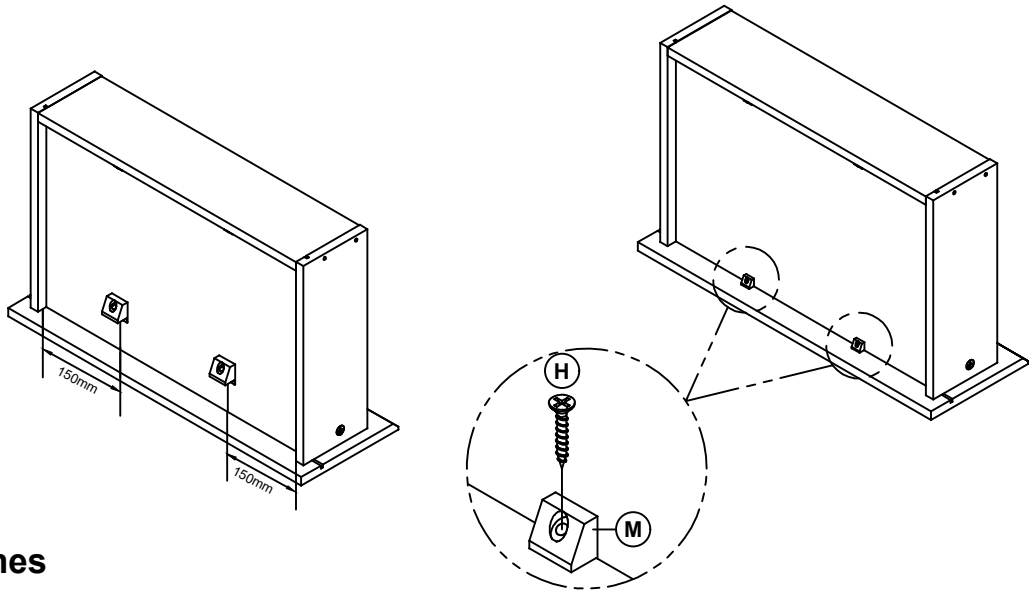


Do This Step 3 Times


79




J x 12



K x 3




K x 3

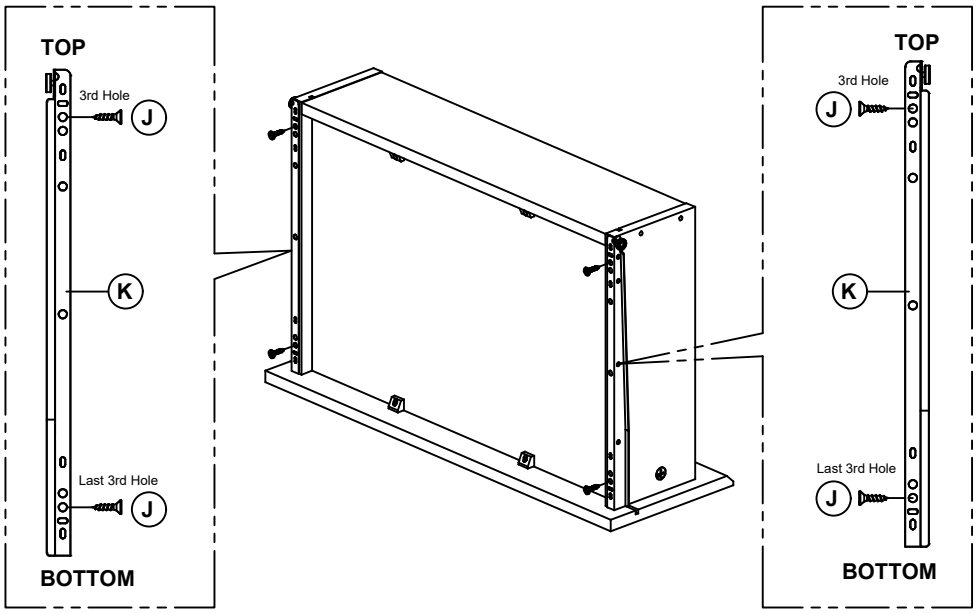

Do This Step 3 Times

Guide To Assembly
Model : Kansas

80

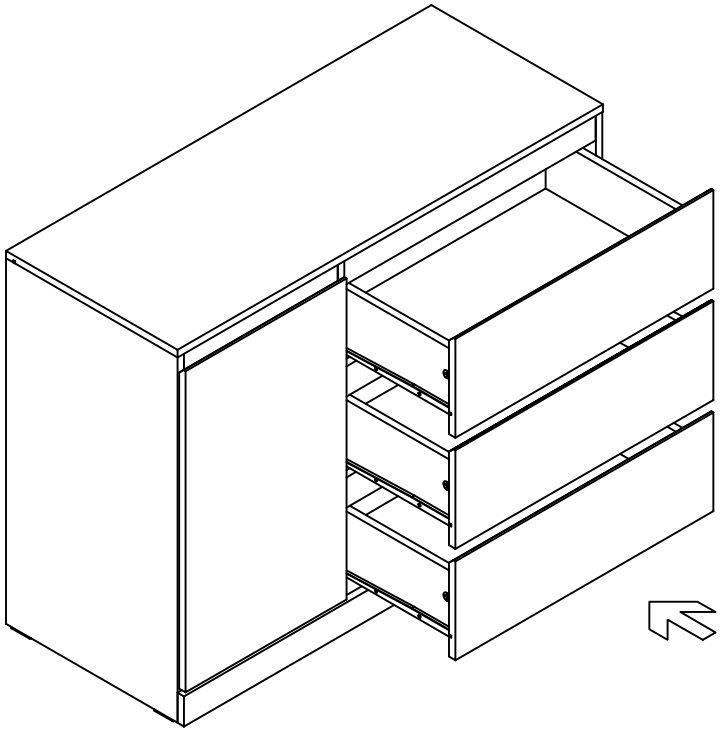

81

